

# Fiat Barchetta

## Powertrain

Systemem	Ident.	DTC	FrFrame	Livedata	Actuators	Coding
<b>Injectie Unit (Motor ECU)</b>						
Hitachi EOBD	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	5	56	17	<input checked="" type="checkbox"/>
Hitachi MPI (1.8l 16V '98)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	0	31	19	<input checked="" type="checkbox"/>
<b>Injectie unit Hitachi</b>						
Hitachi MPI	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	0	27	0	<input type="checkbox"/>

## Chassis

Systemem	Ident.	DTC	FrFrame	Livedata	Actuators	Coding
<b>ABS/ESP Stabilization/Brake System</b>						
Bosch 5.3	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	4	8	8	<input type="checkbox"/>

## Body

Systemem	Ident.	DTC	FrFrame	Livedata	Actuators	Coding
<b>Airbag</b>						
TRW MY 1997	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	2	22	0	<input type="checkbox"/>

DTC = Diagnostic Trouble Codes = Foutcodes lezen en wissen