

# Fiat Coupe 1998-2001

## Powertrain

System	Ident.	DTC	FrFrame	Livedata	Actuators	Coding
<b>Injectie Unit (Motor ECU)</b>						
Bosch Motronic ME3.1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	0	63	6	<input checked="" type="checkbox"/>
Hitachi EOBD	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	5	56	17	<input checked="" type="checkbox"/>
Hitachi MPI (1.8l 16V '98)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	0	31	19	<input checked="" type="checkbox"/>

## Chassis

System	Ident.	DTC	FrFrame	Livedata	Actuators	Coding
<b>ABS/ESP systeem</b>						
Bosch 5.3	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	4	8	8	<input type="checkbox"/>

## Body

System	Ident.	DTC	FrFrame	Livedata	Actuators	Coding
<b>Airbag</b>						
TRW MY 1997	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	2	22	0	<input type="checkbox"/>

DTC = Diagnostic Trouble Codes = Foutcodes lezen en wissen