

**NOTES:**

√ This function is supported.

○ This function is not supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

▲ This function is the new feature in this version.

As for special function please refer to the special function table.

Vehicle	Model Menu	System Menu	ECU Informa	Read Codes	Erase Codes	Live Data	Active Test	Special functions
PEUGEOT	107	Driving assistance / Comfort	√	√	√	√	√	0000,0001
PEUGEOT	107	Engine / Gearbox	√	√	√	√	√	0002,0003,0004
PEUGEOT	107	Vehicle protection / Management of accesses	√	√	√	√	√	0005
PEUGEOT	107	Active and passive safety	√	√	√	√	√	
PEUGEOT	206	Built-in systems interface	√	√	√	√	√	0006,0004,0007,0008
PEUGEOT	206	Driver information/communication	√	√	√	√	√	0004,0009,0010,0008,0011
PEUGEOT	206	Airbags	√	√	√	√	√	0012,0013,0004,0008
PEUGEOT	206	Control the openings	√	√	√	√	√	0014,0004,0010,0008,0015,0016
PEUGEOT	206	Air conditioning	√	√	√	√	√	0004,0008
PEUGEOT	206	Active safety	√	√	√	√	√	0004,0017,0018,0019,0020,0010,0008
PEUGEOT	206	Engines/ automatic gearbox	√	√	√	√	√	0021,0010,0008,0022,0004,0023,0024,0025,0026,0027,0028
PEUGEOT	206	Alarm	√	√	√	√	√	0004,0010,0008
PEUGEOT	206	Visibility /lighting	√	√	√	√	√	0010,0008
PEUGEOT	206	Electric pump unit(power steering)	√	√	√	√	√	0004
PEUGEOT	206 MUX	Built-in systems interface	√	√	√	√	√	0006,0004,0007,0008
PEUGEOT	206 MUX	Driver information/communication	√	√	√	√	√	0004,0009,0010,0008,0011
PEUGEOT	206 MUX	Airbags	√	√	√	√	√	0012,0013,0004,0008
PEUGEOT	206 MUX	Control the openings	√	√	√	√	√	0014,0004,0010,0008,0015,0016

PEUGEOT	206 MUX	Air conditioning	√	√	√	√	√	0004,0008
PEUGEOT	206 MUX	Active safety	√	√	√	√	√	0004,0017,0018,0019,0020,0010,0008
PEUGEOT	206 MUX	Engines/ automatic gearbox	√	√	√	√	√	0021,0010,0008,0022,0004,0023,0024,0025,0026,0027,0028
PEUGEOT	206 MUX	Alarm	√	√	√	√	√	0004,0010,0008
PEUGEOT	206 MUX	Visibility /lighting	√	√	√	√	√	0010,0008
PEUGEOT	206 MUX	Electric pump unit(power steering)	√	√	√	√	√	0004
PEUGEOT	206 +	Driving assistance / Comfort	√	√	√	√	√	0004
PEUGEOT	206 +	Built-in systems interface	√	√	√	√	√	0007,0004
PEUGEOT	206 +	Inform the driver / Audio / Communication	√	√	√	√	√	0011,0004,0009
PEUGEOT	206 +	Vehicle protection / Management of accesses	√	√	√	√	√	0004
PEUGEOT	206 +	Engine / Gearbox	√	√	√	√	√	0004,0021,0029,0028,0030,0031,0032,0003,0033,0034,0022,0035,0036,0027,0037
PEUGEOT	206 +	Active and passive safety	√	√	√	√	√	0004,0017,0012,0013
PEUGEOT	206 +	Visibility / Lighting / Signalling	√	√	√	√	√	
PEUGEOT	207 VAN	Driving assistance / Comfort	√	√	√	√	√	0004
PEUGEOT	207 VAN	Built-in systems interface	√	√	√	√	√	0007,0004
PEUGEOT	207 VAN	Inform the driver / Audio / Communication	√	√	√	√	√	0011,0004,0009
PEUGEOT	207 VAN	Vehicle protection / Management of accesses	√	√	√	√	√	0004
PEUGEOT	207 VAN	Engine / Gearbox	√	√	√	√	√	0004,0021,0029,0028,0030,0031,0032,0003,0033,0034,0022,0035,0036,0027,0037
PEUGEOT	207 VAN	Active and passive safety	√	√	√	√	√	0004,0017,0012,0013
PEUGEOT	207 VAN	Visibility / Lighting / Signalling	√	√	√	√	√	
PEUGEOT	207 CAN	Driving assistance / Comfort	√	√	√	√	√	0004,0038,0039,0040,0041,0042,0043,0044
PEUGEOT	207 CAN	Built-in systems interface	√	√	√	√	√	0045,0036,0004
PEUGEOT	207 CAN	Inform the driver / Audio / Communication	√	√	√	√	√	0004,0046,0011,0022

PEUGEOT	207 CAN	Engine / Gearbox	√	√	√	√	√	0047,0036,0048,0004,0021,0027,0030,0028,0049,0050,0033,0051,0022,0032,0003,0035
PEUGEOT	207 CAN	Vehicle protection / Management of accesses	√	√	√	√	√	0004
PEUGEOT	207 CAN	Active and passive safety	√	√	√	√	√	0004,0017,0019,0020,0012,0013
PEUGEOT	207 CAN	Visibility / Lighting / Signalling	√	√	√	√	√	0004
PEUGEOT	207I	Driving assistance / Comfort	√	√	√	√	√	0004
PEUGEOT	207I	Built-in systems interface	√	√	√	√	√	0007,0004
PEUGEOT	207I	Inform the driver / Audio / Communication	√	√	√	√	√	0011,0004,0009
PEUGEOT	207I	Vehicle protection / Management of accesses	√	√	√	√	√	0004
PEUGEOT	207I	Engine / Gearbox	√	√	√	√	√	0004,0021,0029,0028,0030,0031,0032,0003,0033,0034,0022,0035,0036,0027,0037
PEUGEOT	207I	Active and passive safety	√	√	√	√	√	0004,0017,0012,0013
PEUGEOT	207I	Visibility / Lighting / Signalling	√	√	√	√	√	
PEUGEOT	208	Built-in systems interface	√	√	√	√	√	0004,0030,0046,0036
PEUGEOT	208	Engine ECU	√	√	√	√	√	0021,0030,0052
PEUGEOT	208	ABS or ESP ECU	√	√	√	√	√	0030
PEUGEOT	208	Gearbox	√	√	√	√	√	
PEUGEOT	208	Electric power steering	√	√	√	√	√	
PEUGEOT	208	Trailer relay unit	√	√	√	√	√	
PEUGEOT	208	Air bag	√	√	√	√	√	
PEUGEOT	208	Parking aid	√	√	√	√	√	
PEUGEOT	208	Air conditioning	√	√	√	√	√	
PEUGEOT	208	Radio	√	√	√	√	√	
PEUGEOT	208	Rain sensor	√	√	√	√	√	
PEUGEOT	208	Independent telematic unit (BTA)	√	√	√	√	√	
PEUGEOT	208	Instrument panel	√	√	√	√	√	

PEUGEOT	208	Audio amplifier	√	√	√	√	√	
PEUGEOT	208	Matrix screen integral to the instrument panel	√	√	√	√	√	
PEUGEOT	208	Multiplexed control panel	√	√	√	√	√	
PEUGEOT	208	CD player	√	√	√	√	√	
PEUGEOT	208	Steering wheel with integral controls (VCI)	√	√	√	√	√	
PEUGEOT	208	Voltage retaining device	√	√	√	√	√	
PEUGEOT	208	Battery charge status unit	√	√	√	√	√	
PEUGEOT	208	Telematics	√	√	√	√	√	
PEUGEOT	208	Siren	√	√	√	√	√	
PEUGEOT	208	Anti-theft alarm	√	√	√	√	√	
PEUGEOT	208	Diesel additive	√	√	√	√	√	0030
PEUGEOT	208	Switch module under the steering wheel (Top of column)	√	√	√	√	√	
PEUGEOT	208	Driving school module	√	√	√	√	√	
PEUGEOT	208	Lighting relay unit	√	√	√	√	√	
PEUGEOT	208(Ai91)	Built-in Systems Interface	√	√	√	√	√	0004,0030,0046,0036
PEUGEOT	208(Ai91)	Engine ECU	√	√	√	√	√	
PEUGEOT	208(Ai91)	ABS or ESP ECU	√	√	√	√	√	0030
PEUGEOT	208(Ai91)	Gearbox	√	√	√	√	√	
PEUGEOT	208(Ai91)	Parking aid	√	√	√	√	√	
PEUGEOT	208(Ai91)	CD player	√	√	√	√	√	
PEUGEOT	208(Ai91)	Telematics	√	√	√	√	√	
PEUGEOT	208(Ai91)	Switch module under the steering wheel (top of column)	√	√	√	√	√	
PEUGEOT	208(Ai91)	Air conditioning	√	√	√	√	√	
PEUGEOT	208(Ai91)	Radio	√	√	√	√	√	

PEUGEOT	208(Ai91)	Rain sensor	√	√	√	√	√	
PEUGEOT	208(Ai91)	Airbag	√	√	√	√	√	
PEUGEOT	208(Ai91)	Multiplexed control panel	√	√	√	√	√	
PEUGEOT	208(Ai91)	Electric power steering	√	√	√	√	√	
PEUGEOT	208(Ai91)	Steering wheel with integral controls (VCI)	√	√	√	√	√	
PEUGEOT	208(Ai91)	Instrument panel	√	√	√	√	√	
PEUGEOT	208(Ai91)	Siren	√	√	√	√	√	
PEUGEOT	208(Ai91)	Anti-theft alarm	√	√	√	√	√	
PEUGEOT	208(Ai91)	Stolen vehicle location control unit	√	√	√	√	√	
PEUGEOT	301	BSI	√	√	√	√	√	0046,0053,0004,0030,0036
PEUGEOT	301	Engine ECU	√	√	√	√	√	0054,0055,0030,0056,0057,0021,0058,0004,0059,0060,0061
PEUGEOT	301	ABS	√	√	√	√	√	0004,0030
PEUGEOT	301	Multifunction screen	√	√	√	√	√	0054,0062
PEUGEOT	301	Switch module at the steering wheel	√	√	√	√	√	
PEUGEOT	301	Gearbox ECU	√	√	√	√	√	0004,0021,0027,0037,0063,0048,0064,0030
PEUGEOT	301	Airbags	√	√	√	√	√	0004,0058
PEUGEOT	301	Electric power steering	√	√	√	√	√	
PEUGEOT	301	Radio	√	√	√	√	√	0004,0055
PEUGEOT	301	Parking assistance	√	√	√	√	√	0004,0055,0038
PEUGEOT	301	Siren	√	√	√	√	√	0004
PEUGEOT	301	Instrument panel	√	√	√	√	√	0004
PEUGEOT	301	Trailer relay unit	√	√	√	√	√	0055
PEUGEOT	301	Multiplexed additive adding pump ECU	√	√	√	√	√	0004,0030
PEUGEOT	306	Protect the vehicle	√	√	√	√	√	
PEUGEOT	306	Air bag and seat belt	√	√	√	√	√	0010,0008

PEUGEOT	306	Ventilation and heating	√	√	√	√	√	
PEUGEOT	306	Active safety	√	√	√	√	√	0017
PEUGEOT	306	Engines/ automatic gearbox	√	√	√	√	√	0065,0023,0066,0008
PEUGEOT	306 R	Protect the vehicle	√	√	√	√	√	0005,0067,0068,0069,0004,0070,0071,0072
PEUGEOT	306 R	Airbags	√	√	√	√	√	0010,0008,0012,0013,0004
PEUGEOT	306 R	Active safety	√	√	√	√	√	0017
PEUGEOT	306 R	Engines/ automatic gearbox	√	√	√	√	√	0004,0021,0010,0008,0023,0073,0024,0025,0027
PEUGEOT	307 VAN	Built-in systems interface	√	√	√	√	√	0004,0073,0007,0008
PEUGEOT	307 VAN	Alarm	√	√	√	√	√	0004,0010,0008
PEUGEOT	307 VAN	Driver information/communication	√	√	√	√	√	0004,0010,0008,0073
PEUGEOT	307 VAN	Visibility /lighting	√	√	√	√	√	0010,0008
PEUGEOT	307 VAN	Airbags	√	√	√	√	√	0004,0008
PEUGEOT	307 VAN	Roll-over ECU	√	√	√	√	√	0012,0013,0008
PEUGEOT	307 VAN	Control the openings	√	√	√	√	√	0010,0008,0004
PEUGEOT	307 VAN	Air conditioning	√	√	√	√	√	0004
PEUGEOT	307 VAN	Engines/ automatic gearbox	√	√	√	√	√	0022,0004,0021,0028,0010,0008,0074,0035,0026,0052,0075,00
PEUGEOT	307 VAN	Active safety	√	√	√	√	√	0004,0017,0010,0008,0019,0020
PEUGEOT	307 VAN	Electric pump unit(power steering)	√	√	√	√	√	
PEUGEOT	307 CAN	Driving assistance / Comfort	√	√	√	√	√	0038,0004,0022,0039,0040,0041,0042,0043,0076,0044
PEUGEOT	307 CAN	Built-in systems interface	√	√	√	√	√	0045,0077,0036,0004
PEUGEOT	307 CAN	Inform the driver / Audio / Communication	√	√	√	√	√	0004,0046,0078,0011,0009
PEUGEOT	307 CAN	Engine / Gearbox	√	√	√	√	√	0004,0079,0027,0030,0021,0037,0031,0074,0033,0028,0029,0080,0052,0022,0036,0003
PEUGEOT	307 CAN	Vehicle protection / Management of accesses	√	√	√	√	√	0004,0081,0082
PEUGEOT	307 CAN	Active and passive safety	√	√	√	√	√	0004,0017,0078,0083,0012,0013

PEUGEOT	307 CAN	Visibility / Lighting / Signalling	√	√	√	√	√	0084,0004,0078
PEUGEOT	307 CAN	Engine relay unit	√	√	√	√	√	
PEUGEOT	307 CAN	Trailer relay unit	√	√	√	√	√	
PEUGEOT	307 CAN	High frequency receiver	√	√	√	√	√	
PEUGEOT	308	Driving assistance / Comfort	√	√	√	√	√	0004,0036,0038,0039,0040,0041,0042,0043
PEUGEOT	308	Built-in systems interface	√	√	√	√	√	0045,0036,0004
PEUGEOT	308	Inform the driver / Audio / Communication	√	√	√	√	√	0004,0046,0022,0085,0078,0086
PEUGEOT	308	Engine / Gearbox	√	√	√	√	√	0004,0021,0030,0031,0028,0049,0050,0022,0051,0087,0088,0033,0089,0080,0029,0035,0052,0036,0003,0058,0090,0057,0056,0027,0091,0092,0093,0094,0095,0096,0097,0098,0099,0100,0101,0102,0103,0104,0105,0106,0
PEUGEOT	308	Vehicle protection / Management of accesses	√	√	√	√	√	0004,0082
PEUGEOT	308	Active and passive safety	√	√	√	√	√	0004,0017,0109,0012,0013
PEUGEOT	308	Visibility / Lighting / Signalling	√	√	√	√	√	0004,0110
PEUGEOT	308 4 portes	Built-in systems interface	√	√	√	√	√	0045,0036,0004
PEUGEOT	308 4 portes	Injection/ignition	√	√	√	√	√	0004,0052,0030,0036,0003,0057,0035,0033,0022,0021,0049,0050,0087,0088,0028,0031,0029,0089,0080,0058,0056,0090
PEUGEOT	308 4 portes	ABS/traction control	√	√	√	√	√	0004,0017,0109
PEUGEOT	308 4 portes	Gearbox	√	√	√	√	√	0027,0004,0091,0021,0092,0093,0094,0095,0096,0097,0098,0099,0100,0101,0102,0103,0104,0
PEUGEOT	308 4 portes	Power steering electric pump unit	√	√	√	√	√	
PEUGEOT	308 4 portes	Multiplexed additive adding pump	√	√	√	√	√	0004,0107,0108
PEUGEOT	308 4 portes	Under inflation detection	√	√	√	√	√	0039,0040,0041,0042,0043
PEUGEOT	308 4 portes	Directional headlamps	√	√	√	√	√	0004,0110
PEUGEOT	308 4 portes	Battery charge status unit	√	√	√	√	√	0004
PEUGEOT	308 4 portes	Lane departure warning system	√	√	√	√	√	0004,0036

PEUGEOT	308 4 portes	Engine relay unit	√	√	√	√	√	
PEUGEOT	308 4 portes	Driver and passenger airbags	√	√	√	√	√	0004,0012,0013
PEUGEOT	308 4 portes	Multifunction display	√	√	√	√	√	
PEUGEOT	308 4 portes	Windscreen wiper	√	√	√	√	√	0004
PEUGEOT	308 4 portes	Parking aid	√	√	√	√	√	0004,0038
PEUGEOT	308 4 portes	Heating/ventilation	√	√	√	√	√	0004
PEUGEOT	308 4 portes	Switch module under the steering wheel (Top of column)	√	√	√	√	√	0078
PEUGEOT	308 4 portes	Instrument panel	√	√	√	√	√	0004,0046
PEUGEOT	308 4 portes	CD player	√	√	√	√	√	0004
PEUGEOT	308 4 portes	Telematics	√	√	√	√	√	0004,0085,0022
PEUGEOT	308 4 portes	Audio amplifier	√	√	√	√	√	0004
PEUGEOT	308 4 portes	Hands Free Kit	√	√	√	√	√	0004,0022
PEUGEOT	308 4 portes	Driver's seat memorizing unit	√	√	√	√	√	0004
PEUGEOT	308 4 portes	Anti-theft alarm	√	√	√	√	√	0004
PEUGEOT	308 4 portes	Passenger seat memorisation module	√	√	√	√	√	
PEUGEOT	308 4 portes	Door control pad	√	√	√	√	√	
PEUGEOT	308 4 portes	Sun roof	√	√	√	√	√	0082
PEUGEOT	308 4 portes	Moving panel deflector	√	√	√	√	√	0062
PEUGEOT	308 4 portes	Folding roof	√	√	√	√	√	
PEUGEOT	308 4 portes	Services module	√	√	√	√	√	0086,0004
PEUGEOT	308 4 portes	Driving school module	√	√	√	√	√	
PEUGEOT	308 4 portes	Rain and brightness sensor	√	√	√	√	√	
PEUGEOT	308 4 portes	Pedestrian impact detection unit	√	√	√	√	√	
PEUGEOT	308 4 portes	Seat belts not fastened LED unit (TNB)	√	√	√	√	√	



PEUGEOT	308 4 portes	Matrix screen integral to the instrument panel	√	√	√	√	√	0004
PEUGEOT	308 4 portes	Voltage retaining device	√	√	√	√	√	
PEUGEOT	406	Protect the vehicle	√	√	√	√	√	0005,0071,0068,0111
PEUGEOT	406	Airbags	√	√	√	√	√	
PEUGEOT	406	Air conditioning	√	√	√	√	√	0112
PEUGEOT	406	Active safety	√	√	√	√	√	0017,0010,0008
PEUGEOT	406	Engines/ automatic gearbox	√	√	√	√	√	0023,0065,0008,0004,0010,0021,0113,0027
PEUGEOT	406	Variable power steering	√	√	√	√	√	
PEUGEOT	406	Seat and mirrors with memory	√	√	√	√	√	
PEUGEOT	406 Coupe	Protect the vehicle	√	√	√	√	√	0005,0071,0068,0111
PEUGEOT	406 Coupe	Airbags	√	√	√	√	√	
PEUGEOT	406 Coupe	Air conditioning	√	√	√	√	√	0112
PEUGEOT	406 Coupe	Active safety	√	√	√	√	√	0017
PEUGEOT	406 Coupe	Engines/ automatic gearbox	√	√	√	√	√	0023,0008,0021,0113,0004,0027
PEUGEOT	406 Coupe	Variable power steering	√	√	√	√	√	
PEUGEOT	406 Coupe	Seat and mirrors with memory	√	√	√	√	√	
PEUGEOT	406 R	Built-in systems interface	√	√	√	√	√	0004,0008,0007
PEUGEOT	406 R	Driver information/communication	√	√	√	√	√	0004,0010,0008
PEUGEOT	406 R	Airbags	√	√	√	√	√	0010,0008,0012,0013,0004
PEUGEOT	406 R	Air conditioning	√	√	√	√	√	0010,0008
PEUGEOT	406 R	Active safety	√	√	√	√	√	0017,0004,0020
PEUGEOT	406 R	Engines/ automatic gearbox	√	√	√	√	√	0074,0010,0008,0022,0004,0021,0048,0023,0066,0024,0025,0027
PEUGEOT	406 R	Variable power steering	√	√	√	√	√	0010,0008
PEUGEOT	406 R	Seat and mirrors with memory	√	√	√	√	√	0010,0008

PEUGEOT	406 R	Alarm	√	√	√	√	√	0004,0010,0008
PEUGEOT	406 R	Visibility /lighting	√	√	√	√	√	0010,0008
PEUGEOT	406 R	Seat position memory ECU	√	√	√	√	√	0010,0008
PEUGEOT	406 R Coupe	Built-in systems interface	√	√	√	√	√	0004,0008,0007
PEUGEOT	406 R Coupe	Driver information/communication	√	√	√	√	√	0004,0010,0008
PEUGEOT	406 R Coupe	Airbags	√	√	√	√	√	0010,0008,0012,0013,0004
PEUGEOT	406 R Coupe	Air conditioning	√	√	√	√	√	0010,0008
PEUGEOT	406 R Coupe	Active safety	√	√	√	√	√	0017,0004,0020
PEUGEOT	406 R Coupe	Engines/ automatic gearbox	√	√	√	√	√	0074,0010,0008,0022,0004,0021,0048,0023,0066,0024,0025,00
PEUGEOT	406 R Coupe	Variable power steering	√	√	√	√	√	0010,0008
PEUGEOT	406 R Coupe	Seat and mirrors with memory	√	√	√	√	√	0010,0008
PEUGEOT	406 R Coupe	Alarm	√	√	√	√	√	0004,0010,0008
PEUGEOT	406 R Coupe	Visibility /lighting	√	√	√	√	√	0010,0008
PEUGEOT	406 R Coupe	Seat position memory ECU	√	√	√	√	√	0010,0008
PEUGEOT	407	Driving assistance / Comfort	√	√	√	√	√	0004,0114,0039,0040,0041,0042,0043,0115,0116
PEUGEOT	407	Built-in systems interface	√	√	√	√	√	0117,0036,0004,0045
PEUGEOT	407	Inform the driver / Audio / Communication	√	√	√	√	√	0004,0046,0022,0011
PEUGEOT	407	Engine / Gearbox	√	√	√	√	√	0004,0119,0021,0027,0010,0008,0074,0028,0022,0052,0036,0035,0120,0121
PEUGEOT	407	Vehicle protection / Management of accesses	√	√	√	√	√	0082
PEUGEOT	407	Active and passive safety	√	√	√	√	√	0004,0019,0020,0017,0001,0012,0013
PEUGEOT	407	Visibility / Lighting / Signalling	√	√	√	√	√	0004
PEUGEOT	408	Driving assistance / Comfort	√	√	√	√	√	0004,0036,0038,0039,0040,0041,0042,0043
PEUGEOT	408	Built-in systems interface	√	√	√	√	√	0045,0036,0004
PEUGEOT	408	Inform the driver / Audio / Communication	√	√	√	√	√	0004,0046,0022,0085,0078,0086

								0004,0021,0030,0031,0089,0080,0033,0049,0050,0028,0022,0051,0087,0088,0029,0035,0052,0036,0003,0058,0090,0057,0056,0027,0091,0092,0093,0094,0095,0096,0097,0098,0099,0100,0101,0102,0103,0104,0105,0106,0
PEUGEOT	408	Engine / Gearbox	√	√	√	√	√	
PEUGEOT	408	Vehicle protection / Management of accesses	√	√	√	√	√	0004,0082
PEUGEOT	408	Active and passive safety	√	√	√	√	√	0004,0017,0109,0012,0013
PEUGEOT	408	Visibility / Lighting / Signalling	√	√	√	√	√	0004,0110
PEUGEOT	508	Built-in Systems Interface (BSI)	√	√	√	√	√	0004,0030,0046,0036
PEUGEOT	508	Engine ECU	√	√	√	√	√	0004,0052,0057,0030,0122,0035,0090,0021,0049,0088,0050,0123,0051,0036,0080,0033
PEUGEOT	508	ABS/traction control	√	√	√	√	√	0109,0004,0124
PEUGEOT	508	Gearbox	√	√	√	√	√	0027,0004,0091,0092,0093,0094,0095,0096,0097,0098,0099,0100,0101,0102,0103,0104,0105,0
PEUGEOT	508	Power steering electric pump unit	√	√	√	√	√	
PEUGEOT	508	Under-inflation detection (DSG)	√	√	√	√	√	0125,0126,0043,0040
PEUGEOT	508	Active damper electronic unit	√	√	√	√	√	0004,0124,0127
PEUGEOT	508	Trailer relay unit	√	√	√	√	√	
PEUGEOT	508	Battery charge status unit	√	√	√	√	√	
PEUGEOT	508	Electric secondary brake	√	√	√	√	√	0128,0129
PEUGEOT	508	Engine relay unit	√	√	√	√	√	0130
PEUGEOT	508	Airbags	√	√	√	√	√	0004,0012,0013
PEUGEOT	508	Discharge bulbs vertical and horizontal adjustment	√	√	√	√	√	0004,0084
PEUGEOT	508	Parking assistance	√	√	√	√	√	0004,0038
PEUGEOT	508	Anti-theft alarm	√	√	√	√	√	0131,0004
PEUGEOT	508	Instrument panel	√	√	√	√	√	
PEUGEOT	508	Multifunction screen	√	√	√	√	√	0054

PEUGEOT	508	Data communication ECU RT6	√	√	√	√	√	0004
PEUGEOT	508	Independent telematic unit (BTA)	√	√	√	√	√	0132
PEUGEOT	508	Matrix screen integral to the instrument panel	√	√	√	√	√	0004
PEUGEOT	508	RD5 radio	√	√	√	√	√	0004
PEUGEOT	508	Hands-free control unit	√	√	√	√	√	0054,0133,0134
PEUGEOT	508	Telematic navigator	√	√	√	√	√	
PEUGEOT	508	Radio amplifier	√	√	√	√	√	0054
PEUGEOT	508	Switch module under the steering wheel (Top of column)	√	√	√	√	√	0078
PEUGEOT	508	Seat belts not fastened LED unit (TNB)	√	√	√	√	√	
PEUGEOT	508	Supply protection and management unit	√	√	√	√	√	
PEUGEOT	508	Steering wheel with integral controls (VCI)	√	√	√	√	√	
PEUGEOT	508	Rain and brightness sensor (CDPL)	√	√	√	√	√	0135
PEUGEOT	508	Air conditioning	√	√	√	√	√	0136
PEUGEOT	508	Rear air conditioning	√	√	√	√	√	
PEUGEOT	508	Motorised Boot ECU	√	√	√	√	√	0004,0046,0036
PEUGEOT	508	Driver's seat memorizing unit	√	√	√	√	√	0054
PEUGEOT	508	Voltage retaining device	√	√	√	√	√	0055
PEUGEOT	508	Electronic key reader	√	√	√	√	√	
PEUGEOT	508	Electric steering lock	√	√	√	√	√	0137
PEUGEOT	508	High Head Vision	√	√	√	√	√	0004
PEUGEOT	508	Main beams assistant ECU	√	√	√	√	√	0004
PEUGEOT	508	Windscreen wiper (left-hand side)	√	√	√	√	√	
PEUGEOT	508	Windscreen wiper (right-hand side)	√	√	√	√	√	
PEUGEOT	508	Additional heating	√	√	√	√	√	0114,0030

PEUGEOT	508	Multiplexed control panel	√	√	√	√	√	
PEUGEOT	508	Door control pad	√	√	√	√	√	
PEUGEOT	508Hybrid	Built-in Systems Interface (BSI)	√	√	√	√	√	0004,0030,0046,0036
PEUGEOT	508Hybrid	Engine ECU	√	√	√	√	√	0004,0021,0080,0030,0033,0052
PEUGEOT	508Hybrid	ABS/traction control	√	√	√	√	√	0124,0109,0004
PEUGEOT	508Hybrid	Gearbox	√	√	√	√	√	0048,0120,0030
PEUGEOT	508Hybrid	Power steering electric pump unit	√	√	√	√	√	
PEUGEOT	508Hybrid	Hybrid control ECU 1	√	√	√	√	√	0138,0139,0140,0141,0142,0143,0144
PEUGEOT	508Hybrid	Hybrid control ECU 2	√	√	√	√	√	0144
PEUGEOT	508Hybrid	Traction battery ECU	√	√	√	√	√	0144,0030
PEUGEOT	508Hybrid	Hybrid mode selector	√	√	√	√	√	
PEUGEOT	508Hybrid	Electric secondary brake	√	√	√	√	√	0128,0129
PEUGEOT	508Hybrid	Battery charge status unit	√	√	√	√	√	
PEUGEOT	508Hybrid	Discharge bulbs vertical and horizontal adjustment	√	√	√	√	√	0004,0084
PEUGEOT	508Hybrid	Additional heating	√	√	√	√	√	0114,0030
PEUGEOT	508Hybrid	Engine relay unit	√	√	√	√	√	0130
PEUGEOT	508Hybrid	Trailer relay unit	√	√	√	√	√	
PEUGEOT	508Hybrid	Instrument panel	√	√	√	√	√	
PEUGEOT	508Hybrid	Multifunction screen	√	√	√	√	√	0054
PEUGEOT	508Hybrid	Independent telematic unit (BTA)	√	√	√	√	√	0132
PEUGEOT	508Hybrid	Airbags	√	√	√	√	√	0004,0012,0013
PEUGEOT	508Hybrid	Anti-theft alarm	√	√	√	√	√	0131,0004
PEUGEOT	508Hybrid	Electronic key reader	√	√	√	√	√	
PEUGEOT	508Hybrid	Driver's seat memorizing unit	√	√	√	√	√	0054

PEUGEOT	508Hybrid	Parking assistance	√	√	√	√	√	0004,0038
PEUGEOT	508Hybrid	Data communication ECU RT6	√	√	√	√	√	0004
PEUGEOT	508Hybrid	Multiplexed control panel	√	√	√	√	√	
PEUGEOT	508Hybrid	Matrix screen integral to the instrument panel	√	√	√	√	√	0004
PEUGEOT	508Hybrid	RD5 radio	√	√	√	√	√	0004
PEUGEOT	508Hybrid	Hands-free control unit	√	√	√	√	√	0054,0133,0134
PEUGEOT	508Hybrid	Telematic navigator	√	√	√	√	√	
PEUGEOT	508Hybrid	Radio amplifier	√	√	√	√	√	0054
PEUGEOT	508Hybrid	Seat belts not fastened LED unit (TNB)	√	√	√	√	√	
PEUGEOT	508Hybrid	Rain and brightness sensor (CDPL)	√	√	√	√	√	0135
PEUGEOT	508Hybrid	Air conditioning	√	√	√	√	√	0136
PEUGEOT	508Hybrid	Rear air conditioning	√	√	√	√	√	
PEUGEOT	508Hybrid	Supply protection and management unit	√	√	√	√	√	
PEUGEOT	508Hybrid	Windscreen wiper (left-hand side)	√	√	√	√	√	
PEUGEOT	508Hybrid	Windscreen wiper (right-hand side)	√	√	√	√	√	
PEUGEOT	508Hybrid	Steering wheel with integral controls (VCI)	√	√	√	√	√	
PEUGEOT	508Hybrid	Main beams assistant ECU	√	√	√	√	√	0004
PEUGEOT	508Hybrid	High Head Vision	√	√	√	√	√	0004
PEUGEOT	508Hybrid	Door control pad	√	√	√	√	√	
PEUGEOT	508Hybrid	Switch module under the steering wheel (Top of column)	√	√	√	√	√	0078
PEUGEOT	508Hybrid	Electric steering lock	√	√	√	√	√	0137
PEUGEOT	508RXH	Built-in Systems Interface (BSI)	√	√	√	√	√	0004,0030,0046,0036
PEUGEOT	508RXH	Engine ECU	√	√	√	√	√	0004,0021,0080,0030,0033,0052
PEUGEOT	508RXH	ABS/traction control	√	√	√	√	√	0124,0109,0004

PEUGEOT	508RXH	Gearbox	√	√	√	√	√	0048,0120,0030
PEUGEOT	508RXH	Power steering electric pump unit	√	√	√	√	√	
PEUGEOT	508RXH	Hybrid control ECU 1	√	√	√	√	√	0138,0139,0140,0141,0142,0143,0144
PEUGEOT	508RXH	Hybrid control ECU 2	√	√	√	√	√	0144
PEUGEOT	508RXH	Traction battery ECU	√	√	√	√	√	0144,0030
PEUGEOT	508RXH	Hybrid mode selector	√	√	√	√	√	
PEUGEOT	508RXH	Electric secondary brake	√	√	√	√	√	0128,0129
PEUGEOT	508RXH	Battery charge status unit	√	√	√	√	√	
PEUGEOT	508RXH	Discharge bulbs vertical and horizontal adjustment	√	√	√	√	√	0004,0084
PEUGEOT	508RXH	Additional heating	√	√	√	√	√	0114,0030
PEUGEOT	508RXH	Engine relay unit	√	√	√	√	√	0130
PEUGEOT	508RXH	Trailer relay unit	√	√	√	√	√	
PEUGEOT	508RXH	Instrument panel	√	√	√	√	√	
PEUGEOT	508RXH	Multifunction screen	√	√	√	√	√	0054
PEUGEOT	508RXH	Independent telematic unit (BTA)	√	√	√	√	√	0132
PEUGEOT	508RXH	Airbags	√	√	√	√	√	0004,0012,0013
PEUGEOT	508RXH	Anti-theft alarm	√	√	√	√	√	0131,0004
PEUGEOT	508RXH	Electronic key reader	√	√	√	√	√	
PEUGEOT	508RXH	Driver's seat memorizing unit	√	√	√	√	√	0054
PEUGEOT	508RXH	Parking assistance	√	√	√	√	√	0004,0038
PEUGEOT	508RXH	Data communication ECU RT6	√	√	√	√	√	0004
PEUGEOT	508RXH	Multiplexed control panel	√	√	√	√	√	
PEUGEOT	508RXH	Matrix screen integral to the instrument panel	√	√	√	√	√	0004
PEUGEOT	508RXH	RD5 radio	√	√	√	√	√	0004

PEUGEOT	508RXH	Hands-free control unit	√	√	√	√	√	0054,0133,0134
PEUGEOT	508RXH	Telematic navigator	√	√	√	√	√	
PEUGEOT	508RXH	Radio amplifier	√	√	√	√	√	0054
PEUGEOT	508RXH	Seat belts not fastened LED unit (TNB)	√	√	√	√	√	
PEUGEOT	508RXH	Rain and brightness sensor (CDPL)	√	√	√	√	√	0135
PEUGEOT	508RXH	Air conditioning	√	√	√	√	√	0136
PEUGEOT	508RXH	Rear air conditioning	√	√	√	√	√	
PEUGEOT	508RXH	Supply protection and management unit	√	√	√	√	√	
PEUGEOT	508RXH	Windscreen wiper (left-hand side)	√	√	√	√	√	
PEUGEOT	508RXH	Windscreen wiper (right-hand side)	√	√	√	√	√	
PEUGEOT	508RXH	Steering wheel with integral controls (VCI)	√	√	√	√	√	
PEUGEOT	508RXH	Main beams assistant ECU	√	√	√	√	√	0004
PEUGEOT	508RXH	High Head Vision	√	√	√	√	√	0004
PEUGEOT	508RXH	Door control pad	√	√	√	√	√	
PEUGEOT	508RXH	Switch module under the steering wheel (Top of column)	√	√	√	√	√	0078
PEUGEOT	508RXH	Electric steering lock	√	√	√	√	√	0137
PEUGEOT	508RXH	Motorised Boot ECU	√	√	√	√	√	0004,0046,0036
PEUGEOT	607	Built-in systems interface	√	√	√	√	√	
PEUGEOT	607	Driver information/communication	√	√	√	√	√	0010,0008,0145,0004
PEUGEOT	607	Visibility /lighting	√	√	√	√	√	0062,0010,0008
PEUGEOT	607	Airbags	√	√	√	√	√	0004,0008
PEUGEOT	607	Control the openings	√	√	√	√	√	0146,0008,0010
PEUGEOT	607	Air conditioning	√	√	√	√	√	0004,0008
PEUGEOT	607	Active safety	√	√	√	√	√	0004,0017,0020,0147



PEUGEOT	607	Engines/ automatic gearbox	√	√	√	√	√	0074,0010,0008,0021,0022,0004
PEUGEOT	607	Storing of the driving position	√	√	√	√	√	0010,0008
PEUGEOT	607 R	Driving assistance / Comfort	√	√	√	√	√	0004,0039,0040,0041,0042,0043,0115
PEUGEOT	607 R	Built-in systems interface	√	√	√	√	√	0045,0036,0004
PEUGEOT	607 R	Inform the driver / Audio / Communication	√	√	√	√	√	0004,0046,0011
PEUGEOT	607 R	Engine / Gearbox	√	√	√	√	√	0004,0119,0021,0074,0036,0052,0148,0022
PEUGEOT	607 R	Vehicle protection / Management of accesses	√	√	√	√	√	0004,0146
PEUGEOT	607 R	Active and passive safety	√	√	√	√	√	0004,0019,0017,0012,0013
PEUGEOT	607 R	Visibility / Lighting / Signalling	√	√	√	√	√	0062
PEUGEOT	806	Protect the vehicle	√	√	√	√	√	
PEUGEOT	806	Airbags	√	√	√	√	√	0010,0008
PEUGEOT	806	Air conditioning	√	√	√	√	√	0114
PEUGEOT	806	Active safety	√	√	√	√	√	0017
PEUGEOT	806	Engines/ automatic gearbox	√	√	√	√	√	0021,0010,0008,0023,0004,0027
PEUGEOT	806	Additional heating	√	√	√	√	√	0114
PEUGEOT	807 VAN	Built-in systems interface	√	√	√	√	√	0004,0007,0008
PEUGEOT	807 VAN	Alarm	√	√	√	√	√	0004,0010,0008
PEUGEOT	807 VAN	Driver information/communication	√	√	√	√	√	0004,0010,0008,0011
PEUGEOT	807 VAN	Visibility /lighting	√	√	√	√	√	0010,0008,0084
PEUGEOT	807 VAN	Airbags	√	√	√	√	√	0004,0008
PEUGEOT	807 VAN	Control the openings	√	√	√	√	√	0010,0008,0004
PEUGEOT	807 VAN	Active safety	√	√	√	√	√	0004,0017,0019,0020,0010,0008
PEUGEOT	807 VAN	Air conditioning	√	√	√	√	√	0114,0004,0008
PEUGEOT	807 VAN	Engines/ automatic gearbox	√	√	√	√	√	0021,0010,0008,0074,0022,0004,0027

PEUGEOT	807 VAN	Storing of the driving position	√	√	√	√	√	0008
PEUGEOT	807 VAN	Additional heating	√	√	√	√	√	0114
PEUGEOT	807 CAN	Driving assistance / Comfort	√	√	√	√	√	0004,0114,0039,0040,0041,0042,0043
PEUGEOT	807 CAN	Built-in systems interface	√	√	√	√	√	0045,0036,0004
PEUGEOT	807 CAN	Inform the driver / Audio / Communication	√	√	√	√	√	0004,0046,0022,0011
PEUGEOT	807 CAN	Engine / Gearbox	√	√	√	√	√	0004,0021,0027,0119,0022,0074,0052,0120
PEUGEOT	807 CAN	Vehicle protection / Management of accesses	√	√	√	√	√	0004
PEUGEOT	807 CAN	Active and passive safety	√	√	√	√	√	0004,0019,0017,0109,0012,0013
PEUGEOT	807 CAN	Visibility / Lighting / Signalling	√	√	√	√	√	
PEUGEOT	1007 VAN	Driving assistance / Comfort	√	√	√	√	√	0004
PEUGEOT	1007 VAN	Built-in systems interface	√	√	√	√	√	0036,0004
PEUGEOT	1007 VAN	Inform the driver / Audio / Communication	√	√	√	√	√	0011,0004
PEUGEOT	1007 VAN	Engine / Gearbox	√	√	√	√	√	0047,0036,0048,0022,0004,0021,0028,0074
PEUGEOT	1007 VAN	Vehicle protection / Management of accesses	√	√	√	√	√	0004
PEUGEOT	1007 VAN	Active and passive safety	√	√	√	√	√	0004,0017,0019,0020
PEUGEOT	1007 VAN	Visibility / Lighting / Signalling	√	√	√	√	√	
PEUGEOT	1007 CAN	Driving assistance / Comfort	√	√	√	√	√	0004,0039,0040,0041,0042,0043
PEUGEOT	1007 CAN	Built-in systems interface	√	√	√	√	√	0045,0036,0004
PEUGEOT	1007 CAN	Inform the driver / Audio / Communication	√	√	√	√	√	0004,0046,0011
PEUGEOT	1007 CAN	Engine / Gearbox	√	√	√	√	√	0047,0036,0048,0004,0021,0074,0035
PEUGEOT	1007 CAN	Vehicle protection / Management of accesses	√	√	√	√	√	0004
PEUGEOT	1007 CAN	Active and passive safety	√	√	√	√	√	0004,0017,0019,0020,0012,0013
PEUGEOT	1007 CAN	Visibility / Lighting / Signalling	√	√	√	√	√	
PEUGEOT	2008	Built-in Systems Interface	√	√	√	√	√	0004,0030,0046,0036
PEUGEOT	2008	Engine ECU	√	√	√	√	√	0021,0030,0052

PEUGEOT	2008	ABS or ESP ECU	√	√	√	√	√	0030
PEUGEOT	2008	Gearbox	√	√	√	√	√	
PEUGEOT	2008	Telematics	√	√	√	√	√	
PEUGEOT	2008	Rain sensor	√	√	√	√	√	
PEUGEOT	2008	Siren	√	√	√	√	√	
PEUGEOT	2008	Anti-theft alarm	√	√	√	√	√	
PEUGEOT	2008	Audio amplifier	√	√	√	√	√	
PEUGEOT	2008	Airbag	√	√	√	√	√	
PEUGEOT	2008	CD player	√	√	√	√	√	
PEUGEOT	2008	Battery charge status unit	√	√	√	√	√	
PEUGEOT	2008	Instrument panel	√	√	√	√	√	
PEUGEOT	2008	Multiplexed control panel	√	√	√	√	√	
PEUGEOT	2008	Trailer relay unit	√	√	√	√	√	
PEUGEOT	2008	Switch module under the steering wheel (top of column)	√	√	√	√	√	
PEUGEOT	2008	Radio	√	√	√	√	√	
PEUGEOT	2008	Electric power steering	√	√	√	√	√	
PEUGEOT	2008	Steering wheel with integral controls (VCI)	√	√	√	√	√	
PEUGEOT	2008	Air conditioning	√	√	√	√	√	
PEUGEOT	2008	Parking aid	√	√	√	√	√	
PEUGEOT	2008	Matrix screen integral to the instrument panel	√	√	√	√	√	
PEUGEOT	2008	Independent telematic unit	√	√	√	√	√	
PEUGEOT	2008	Diesel additive	√	√	√	√	√	0030
PEUGEOT	3008	Driving assistance / Comfort	√	√	√	√	√	0004,0149,0150,0036,0038,0039,0040,0041,0042,0043,0030
PEUGEOT	3008	Built-in systems interface	√	√	√	√	√	0045,0036,0004

PEUGEOT	3008	Inform the driver / Audio / Communication	√	√	√	√	√	0004,0086,0022
PEUGEOT	3008	Engine / Gearbox	√	√	√	√	√	0022,0004,0021,0035,0052,0027
PEUGEOT	3008	Vehicle protection / Management of accesses	√	√	√	√	√	0004
PEUGEOT	3008	Active and passive safety	√	√	√	√	√	0012,0013,0004,0001,0017,0124
PEUGEOT	3008	Visibility / Lighting / Signalling	√	√	√	√	√	0004,0110
PEUGEOT	3008 HYbrid4	Parking aid	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	ABS or ESP ECU	√	√	√	√	√	0004,0124,0109
PEUGEOT	3008 HYbrid4	Multifunction display	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Airbags	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Anti-theft alarm	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Audio amplifier	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Radio	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Battery charge status unit	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Built-in systems interface	√	√	√	√	√	0045,0036,0004
PEUGEOT	3008 HYbrid4	MCP piloted manual gearbox(hybrid)	√	√	√	√	√	0030
PEUGEOT	3008 HYbrid4	Engine relay unit	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Trailer relay unit	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	CD player	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Air conditioning ECU	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Instrument panel	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Rain sensor	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Power steering electric pump unit	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Windscreen wiper	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Hybrid mode selector	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Electric secondary brake	√	√	√	√	√	

PEUGEOT	3008 HYbrid4	Switch module under the steering wheel (Top of column)	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Engine ECU	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Hands-free kit (Telephone)	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Services module	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Multiplexed additive adding pump	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Driver's door module	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Telematics	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	High Head Vision	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Traction battery ECU	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Hybrid control ECU 2	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Hybrid control ECU 1	√	√	√	√	√	
PEUGEOT	3008 HYbrid4	Matrix screen integral to the instrument panel	√	√	√	√	√	
PEUGEOT	4007	Driving assistance / Comfort	√	√	√	√	√	
PEUGEOT	4007	Built-in systems interface	√	√	√	√	√	0004
PEUGEOT	4007	Inform the driver / Audio / Communication	√	√	√	√	√	0004,0046
PEUGEOT	4007	Engine/Automatic Gearbox/Transmission	√	√	√	√	√	0004,0036,0052
PEUGEOT	4007	Vehicle protection / Management of accesses	√	√	√	√	√	0036
PEUGEOT	4007	Active and passive safety	√	√	√	√	√	0126,0004,0036,0019
PEUGEOT	4007	Visibility / Lighting / Signalling	√	√	√	√	√	0110
PEUGEOT	4008	Parking aid	√	√	√	√	√	
PEUGEOT	4008	ABS/traction control	√	√	√	√	√	0004,0151,0030
PEUGEOT	4008	Driver and passenger airbags	√	√	√	√	√	
PEUGEOT	4008	Driver's door module	√	√	√	√	√	
PEUGEOT	4008	Rain and brightness sensor	√	√	√	√	√	

PEUGEOT	4008	Anti-theft alarm	√	√	√	√	√	
PEUGEOT	4008	Power steering	√	√	√	√	√	
PEUGEOT	4008	Instrument panel	√	√	√	√	√	0046
PEUGEOT	4008	Starting authorisation ECU	√	√	√	√	√	
PEUGEOT	4008	Radio or radiotelephone (radio part)	√	√	√	√	√	
PEUGEOT	4008	Injection/ignition	√	√	√	√	√	0052
PEUGEOT	4008	Rear final drive piloted clutch	√	√	√	√	√	
PEUGEOT	4008	Directional headlamps	√	√	√	√	√	
PEUGEOT	4008	Locking and immobiliser control module	√	√	√	√	√	
PEUGEOT	4008	Calculateur stop and start	√	√	√	√	√	
PEUGEOT	4008	Steering wheel angle sensor	√	√	√	√	√	0019
PEUGEOT	4008	Heating/ventilation	√	√	√	√	√	
PEUGEOT	4008	Gearbox	√	√	√	√	√	
PEUGEOT	4008	Built-in systems interface	√	√	√	√	√	
PEUGEOT	4008	Navigation	√	√	√	√	√	
PEUGEOT	5008	Driving assistance / Comfort	√	√	√	√	√	0004,0149,0150,0036,0038,0039,0040,0041,0042,0043,0030
PEUGEOT	5008	Built-in systems interface	√	√	√	√	√	0045,0036,0004
PEUGEOT	5008	Inform the driver / Audio / Communication	√	√	√	√	√	0004,0086,0022
PEUGEOT	5008	Engine / Gearbox	√	√	√	√	√	0022,0004,0021,0035,0052,0027
PEUGEOT	5008	Vehicle protection / Management of accesses	√	√	√	√	√	0004
PEUGEOT	5008	Active and passive safety	√	√	√	√	√	0012,0013,0004,0001,0017,0124
PEUGEOT	5008	Visibility / Lighting / Signalling	√	√	√	√	√	0004,0110
PEUGEOT	ION	Built-in systems interface	√	√	√	√	√	
PEUGEOT	ION	Electric motor ECU	√	√	√	√	√	
PEUGEOT	ION	Traction battery ECU	√	√	√	√	√	

PEUGEOT	ION	Onboard charger of the traction battery	√	√	√	√	√	
PEUGEOT	ION	Electric vehicle management ECU	√	√	√	√	√	
PEUGEOT	ION	Traction battery cell electronics 01	√	√	√	√	√	
PEUGEOT	ION	Traction battery cell electronics 02	√	√	√	√	√	
PEUGEOT	ION	Traction battery cell electronics 03	√	√	√	√	√	
PEUGEOT	ION	Traction battery cell electronics 04	√	√	√	√	√	
PEUGEOT	ION	Traction battery cell electronics 05	√	√	√	√	√	
PEUGEOT	ION	Traction battery cell electronics 06	√	√	√	√	√	
PEUGEOT	ION	Traction battery cell electronics 07	√	√	√	√	√	
PEUGEOT	ION	Traction battery cell electronics 08	√	√	√	√	√	
PEUGEOT	ION	Traction battery cell electronics 09	√	√	√	√	√	
PEUGEOT	ION	Traction battery cell electronics 10	√	√	√	√	√	
PEUGEOT	ION	Traction battery cell electronics 11	√	√	√	√	√	
PEUGEOT	ION	Traction battery cell electronics 12	√	√	√	√	√	
PEUGEOT	ION	ESP	√	√	√	√	√	
PEUGEOT	ION	Power steering	√	√	√	√	√	
PEUGEOT	ION	Steering wheel angle sensor	√	√	√	√	√	
PEUGEOT	ION	Airbags	√	√	√	√	√	
PEUGEOT	ION	Gateway wiring housing	√	√	√	√	√	
PEUGEOT	ION	Independent telematic unit (BTA)	√	√	√	√	√	
PEUGEOT	ION	Instrument panel	√	√	√	√	√	0046
PEUGEOT	ION	Radio	√	√	√	√	√	
PEUGEOT	ION	Air conditioning	√	√	√	√	√	
PEUGEOT	ION	Air conditioning compressor and passenger compartment heating control module	√	√	√	√	√	

PEUGEOT	RCZ	Driving assistance / Comfort	√	√	√	√	√	0004,0036,0038,0039,0040,0041,0042,0043
PEUGEOT	RCZ	Built-in systems interface	√	√	√	√	√	0045,0036,0004
PEUGEOT	RCZ	Inform the driver / Audio / Communication	√	√	√	√	√	0004,0046,0022,0085,0078,0086
PEUGEOT	RCZ	Engine / Gearbox	√	√	√	√	√	0004,0021,0030,0031,0028,0049,0050,0022,0051,0087,0088,0033,0089,0080,0029,0035,0052,0036,0003,0058,0090,0057,0056,0027,0091,0092,0093,0094,0095,0096,0097,0098,0099,0100,0101,0102,0103,0104,0105,0106,0
PEUGEOT	RCZ	Vehicle protection / Management of accesses	√	√	√	√	√	0004,0082
PEUGEOT	RCZ	Active and passive safety	√	√	√	√	√	0004,0017,0109,0012,0013
PEUGEOT	RCZ	Visibility / Lighting / Signalling	√	√	√	√	√	0004,0110
PEUGEOT	BOXER	Warnings	√	√	√	√	√	
PEUGEOT	BOXER	Air conditioning	√	√	√	√	√	0114,0010,0008
PEUGEOT	BOXER	Airbags	√	√	√	√	√	
PEUGEOT	BOXER	Engines/ automatic gearbox	√	√	√	√	√	0021,0010,0008,0152,0004
PEUGEOT	BOXER	Radio frequency receiver	√	√	√	√	√	
PEUGEOT	BOXER	Active safety	√	√	√	√	√	0017
PEUGEOT	BOXER	Service module	√	√	√	√	√	0004,0009
PEUGEOT	BOXER 3	Driving assistance / Comfort	√	√	√	√	√	0004,0114
PEUGEOT	BOXER 3	Built-in systems interface	√	√	√	√	√	0153,0004,0036
PEUGEOT	BOXER 3	Inform the driver / Audio / Communication	√	√	√	√	√	0046,0004
PEUGEOT	BOXER 3	Engine / Gearbox	√	√	√	√	√	0004,0154
PEUGEOT	BOXER 3	Active and passive safety	√	√	√	√	√	0017,0019,0083,0030
PEUGEOT	Minibus	Driving assistance / Comfort	√	√	√	√	√	0155,0114
PEUGEOT	Minibus	Built-in systems interface	√	√	√	√	√	0004,0036
PEUGEOT	Minibus	Inform the driver / Audio / Communication	√	√	√	√	√	0046,0004



PEUGEOT	BOXER 3 Minibus	Engine / Gearbox	√	√	√	√	√	0004,0154
PEUGEOT	BOXER 3 Minibus	Active and passive safety	√	√	√	√	√	0017,0019,0083,0030
PEUGEOT	BIPPER	Driving assistance / Comfort	√	√	√	√	√	0004
PEUGEOT	BIPPER	Built-in systems interface	√	√	√	√	√	0004,0036
PEUGEOT	BIPPER	Inform the driver / Audio / Communication	√	√	√	√	√	0046
PEUGEOT	BIPPER	Engine / Gearbox	√	√	√	√	√	0021,0156,0157,0036,0004,015 4,0048,0047,0120
PEUGEOT	BIPPER	Active and passive safety	√	√	√	√	√	
PEUGEOT	EXPERT	Protect the vehicle	√	√	√	√	√	0070,0072
PEUGEOT	EXPERT	Airbags	√	√	√	√	√	0010,0008
PEUGEOT	EXPERT	Air conditioning	√	√	√	√	√	0114
PEUGEOT	EXPERT	Engines/ automatic gearbox	√	√	√	√	√	0021,0010,0008,0004,0027
PEUGEOT	EXPERT	Active safety	√	√	√	√	√	0017
PEUGEOT	EXPERT	Additional heating	√	√	√	√	√	0114
PEUGEOT	EXPERT 2	Driving assistance / Comfort	√	√	√	√	√	0004,0114,0120,0136,0115,015 8,0159
PEUGEOT	EXPERT 2	Built-in systems interface	√	√	√	√	√	0045,0036,0004
PEUGEOT	EXPERT 2	Inform the driver / Audio / Communication	√	√	√	√	√	0004,0022,0011
PEUGEOT	EXPERT 2	Engine / Gearbox	√	√	√	√	√	0022,0004,0021,0052,0027
PEUGEOT	EXPERT 2	Vehicle protection / Management of accesses	√	√	√	√	√	0004
PEUGEOT	EXPERT 2	Active and passive safety	√	√	√	√	√	0004,0078,0017,0001,0012,001 3
PEUGEOT	EXPERT 2	Visibility / Lighting / Signalling	√	√	√	√	√	
PEUGEOT	EXPERT 3	Built-in Systems Interface (BSI)	√	√	√	√	√	0045,0036,0004
PEUGEOT	EXPERT 3	Injection/ignition	√	√	√	√	√	0004,0052,0022,0021
PEUGEOT	EXPERT 3	ABS/traction control	√	√	√	√	√	0004,0001,0017,0078
PEUGEOT	EXPERT 3	Tyre Under-Inflation Detection (DSG)	√	√	√	√	√	
PEUGEOT	EXPERT 3	Pneumatic suspension	√	√	√	√	√	0004,0115,0158,0159

PEUGEOT	EXPERT 3	Additional heating	√	√	√	√	√	0114
PEUGEOT	EXPERT 3	Trailer relay unit	√	√	√	√	√	
PEUGEOT	EXPERT 3	Bodywork conversion unit	√	√	√	√	√	
PEUGEOT	EXPERT 3	Engine relay unit	√	√	√	√	√	
PEUGEOT	EXPERT 3	Driver and passenger airbags	√	√	√	√	√	
PEUGEOT	EXPERT 3	Instrument panel	√	√	√	√	√	0004
PEUGEOT	EXPERT 3	Parking aid	√	√	√	√	√	0004
PEUGEOT	EXPERT 3	Switch module at the steering wheel	√	√	√	√	√	
PEUGEOT	EXPERT 3	Multifunction display	√	√	√	√	√	
PEUGEOT	EXPERT 3	Heating/ventilation	√	√	√	√	√	0004,0120
PEUGEOT	EXPERT 3	CD player	√	√	√	√	√	
PEUGEOT	EXPERT 3	Hands-free kit (Telephone)	√	√	√	√	√	
PEUGEOT	EXPERT 3	Radio	√	√	√	√	√	
PEUGEOT	EXPERT 3	Telematics	√	√	√	√	√	0011,0004
PEUGEOT	EXPERT 3	Anti-theft alarm	√	√	√	√	√	
PEUGEOT	EXPERT 3	Anti-slip mode selector	√	√	√	√	√	
PEUGEOT	EXPERT 3	Rear air conditioning	√	√	√	√	√	0136
PEUGEOT	EXPERT 3	Rain and brightness sensor	√	√	√	√	√	
PEUGEOT	EXPERT 3	High frequency receiver	√	√	√	√	√	
PEUGEOT	EXPERT 3	Gearbox	√	√	√	√	√	
PEUGEOT	HOGGAR	Driving assistance / Comfort	√	√	√	√	√	0004
PEUGEOT	HOGGAR	Built-in systems interface	√	√	√	√	√	0007,0004
PEUGEOT	HOGGAR	Inform the driver / Audio / Communication	√	√	√	√	√	0011,0004,0009
PEUGEOT	HOGGAR	Vehicle protection / Management of accesses	√	√	√	√	√	0004

PEUGEOT	HOGGAR	Engine / Gearbox	√	√	√	√	√	0004,0021,0029,0028,0030,0031,0032,0003,0033,0034,0022,0035,0036,0027,0037
PEUGEOT	HOGGAR	Active and passive safety	√	√	√	√	√	0004,0017,0012,0013
PEUGEOT	HOGGAR	Visibility / Lighting / Signalling	√	√	√	√	√	
PEUGEOT	PARTNER	Built-in systems interface	√	√	√	√	√	0022,0004,0008,0006,0036,0045
PEUGEOT	PARTNER	Protect the vehicle	√	√	√	√	√	0005,0067,0068,0069
PEUGEOT	PARTNER	Driver information/communication	√	√	√	√	√	0004,0010,0008,0009,0011
PEUGEOT	PARTNER	Airbags	√	√	√	√	√	0160,0008,0012,0013,0004
PEUGEOT	PARTNER	Air conditioning	√	√	√	√	√	
PEUGEOT	PARTNER	Engines/ automatic gearbox	√	√	√	√	√	0004,0021,0010,0008,0023,0028,0022,0161,0162,0160,0029
PEUGEOT	PARTNER	Active safety	√	√	√	√	√	0017,0163,0164,0165,0004,0019,0020,0010,0008,0001
PEUGEOT	PARTNER	Additional heating	√	√	√	√	√	
PEUGEOT	PARTNER	Driving assistance / Comfort	√	√	√	√	√	0114,0038,0004,0036,0039,0040,0041,0042,0043
PEUGEOT	PARTNER	Alarm	√	√	√	√	√	0004,0010,0008
PEUGEOT	PARTNER	Pre-tensioning seat-belts ECU	√	√	√	√	√	
PEUGEOT	PARTNER	Visibility /lighting	√	√	√	√	√	0010,0008
PEUGEOT	PARTNER	Inform the driver / Audio / Communication	√	√	√	√	√	0004,0022
PEUGEOT	PARTNER	Engine / Gearbox	√	√	√	√	√	0022,0004,0021,0035,0036,0052
PEUGEOT	PARTNER	Vehicle protection / Management of accesses	√	√	√	√	√	0004
PEUGEOT	PARTNER	Active and passive safety	√	√	√	√	√	0004,0017,0109
PEUGEOT	PARTNER	Visibility / Lighting / Signalling	√	√	√	√	√	
PEUGEOT	PARTNER B9	Driving assistance / Comfort	√	√	√	√	√	0038,0004,0036,0039,0040,0041,0042,0043
PEUGEOT	PARTNER B9	Built-in systems interface	√	√	√	√	√	0045,0036,0004
PEUGEOT	PARTNER B9	Inform the driver / Audio / Communication	√	√	√	√	√	0004,0022
PEUGEOT	PARTNER B9	Engine / Gearbox	√	√	√	√	√	0022,0004,0021,0035,0036,0052

PEUGEOT	PARTNER B9	Vehicle protection / Management of accesses	√	√	√	√	√	0004
PEUGEOT	PARTNER B9	Active and passive safety	√	√	√	√	√	0004,0017,0109
PEUGEOT	PARTNER B9	Visibility / Lighting / Signalling	√	√	√	√	√	
CITROEN	C-ZERO	Built-in Systems Interface	√	√	√	√	√	
CITROEN	C-ZERO	Electric motor ECU	√	√	√	√	√	
CITROEN	C-ZERO	Traction battery ECU	√	√	√	√	√	
CITROEN	C-ZERO	Onboard charger of the traction battery	√	√	√	√	√	
CITROEN	C-ZERO	Electric vehicle management ECU	√	√	√	√	√	
CITROEN	C-ZERO	Traction battery cell electronics 01	√	√	√	√	√	
CITROEN	C-ZERO	Traction battery cell electronics 02	√	√	√	√	√	
CITROEN	C-ZERO	Traction battery cell electronics 03	√	√	√	√	√	
CITROEN	C-ZERO	Traction battery cell electronics 04	√	√	√	√	√	
CITROEN	C-ZERO	Traction battery cell electronics 05	√	√	√	√	√	
CITROEN	C-ZERO	Traction battery cell electronics 06	√	√	√	√	√	
CITROEN	C-ZERO	Traction battery cell electronics 07	√	√	√	√	√	
CITROEN	C-ZERO	Traction battery cell electronics 08	√	√	√	√	√	
CITROEN	C-ZERO	Traction battery cell electronics 09	√	√	√	√	√	
CITROEN	C-ZERO	Traction battery cell electronics 10	√	√	√	√	√	
CITROEN	C-ZERO	Traction battery cell electronics 11	√	√	√	√	√	
CITROEN	C-ZERO	Traction battery cell electronics 12	√	√	√	√	√	
CITROEN	C-ZERO	ESP	√	√	√	√	√	0166
CITROEN	C-ZERO	Power steering	√	√	√	√	√	
CITROEN	C-ZERO	Steering wheel angle sensor	√	√	√	√	√	0167,0166
CITROEN	C-ZERO	Airbag	√	√	√	√	√	
CITROEN	C-ZERO	Gateway wiring housing	√	√	√	√	√	
CITROEN	C-ZERO	Independent telematic unit (BTA)	√	√	√	√	√	
CITROEN	C-ZERO	Instrument panel	√	√	√	√	√	
CITROEN	C-ZERO	Radio	√	√	√	√	√	
CITROEN	C-ZERO	Air conditioning	√	√	√	√	√	

		Air conditioning compressor and passenger compartment heating control module						
CITROEN	C-ZERO		√	√	√	√	√	
CITROEN	C1	Engine ECU	√	√	√	√	√	0054,0022,0168
CITROEN	C1	Gearbox ECU	√	√	√	√	√	0169,0170
CITROEN	C1	ABS	√	√	√	√	√	
CITROEN	C1	Airbag	√	√	√	√	√	
CITROEN	C1	Immobiliser control module( Immobiliser)	√	√	√	√	√	0171
CITROEN	C1	Electric power steering	√	√	√	√	√	0172
CITROEN	C1	Radio	√	√	√	√	√	
CITROEN	C2	BSI	√	√	√	√	√	0046,0053,0054,0173,0174,0175,0176,0177
CITROEN	C2	Instrument panel	√	√	√	√	√	0054,0174
CITROEN	C2	Radio	√	√	√	√	√	0054,0174,0022
CITROEN	C2	CD player	√	√	√	√	√	
CITROEN	C2	Parking assistance	√	√	√	√	√	0054,0174
CITROEN	C2	Air conditioning	√	√	√	√	√	0054,0174
CITROEN	C2	Navigation	√	√	√	√	√	
CITROEN	C2	Alarm	√	√	√	√	√	0054,0174,0178,0022
CITROEN	C2	Switch module under the steering wheel	√	√	√	√	√	
CITROEN	C2	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	C2	Airbag	√	√	√	√	√	0054,0174,0022
CITROEN	C2	Display or Telematics	√	√	√	√	√	0054,0174,0179,0180,0181,0182,0183,0184
CITROEN	C2	Engine ECU	√	√	√	√	√	0185,0186,0054,0022,0168,0187,0174,0188,0189
CITROEN	C2	Anti-lock brake system	√	√	√	√	√	0054,0174
CITROEN	C2	Gearbox ECU	√	√	√	√	√	0036,0190,0191,0048
CITROEN	C2	Electric power steering ECU	√	√	√	√	√	0054,0174
CITROEN	C2	Multifunction screen	√	√	√	√	√	0054,0022
CITROEN	C2	Telematic	√	√	√	√	√	0192,0181,0174,0184
CITROEN	C2	High frequency receiver	√	√	√	√	√	
CITROEN	C2	Trailer relay unit	√	√	√	√	√	
CITROEN	C2	Engine relay unit	√	√	√	√	√	
CITROEN	C2	Hands Free Kit	√	√	√	√	√	0054,0022
CITROEN	C2	ECU Reversible 'Stop-Start' alternator	√	√	√	√	√	
CITROEN	C2 CHINE	BSI	√	√	√	√	√	0046,0053,0054,0174,0175,017
CITROEN	C2 CHINE	Instrument panel	√	√	√	√	√	0054,0174
CITROEN	C2 CHINE	Air conditioning	√	√	√	√	√	0054,0022
CITROEN	C2 CHINE	ABS	√	√	√	√	√	0054,0174
CITROEN	C2 CHINE	Steering wheel with fixed central controls	√	√	√	√	√	
CITROEN	C2 CHINE	Airbag	√	√	√	√	√	0054,0022
CITROEN	C2 CHINE	Engine ECU	√	√	√	√	√	0174,0168,0054
CITROEN	C2 CHINE	Gearbox ECU	√	√	√	√	√	

CITROEN	C3	BSI	√	√	√	√	√	0046,0053,0054,0173,0174,0175,0176
CITROEN	C3	Instrument panel	√	√	√	√	√	0054,0174
CITROEN	C3	Radio	√	√	√	√	√	0054,0174,0022
CITROEN	C3	CD player	√	√	√	√	√	
CITROEN	C3	Parking assistance	√	√	√	√	√	
CITROEN	C3	Air conditioning	√	√	√	√	√	0054,0174
CITROEN	C3	Navigation	√	√	√	√	√	
CITROEN	C3	Alarm	√	√	√	√	√	0054,0174
CITROEN	C3	Switch module under the steering wheel	√	√	√	√	√	
CITROEN	C3	Diesel additive function	√	√	√	√	√	0193,0194,0195,0196
CITROEN	C3	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	C3	Driving school mode	√	√	√	√	√	
CITROEN	C3	Airbag	√	√	√	√	√	0054,0174
CITROEN	C3	Multifunction display	√	√	√	√	√	0054,0174,0179,0180,0181,0182,0183,0184
CITROEN	C3	Telematic	√	√	√	√	√	0197,0198
CITROEN	C3	Engine ECU	√	√	√	√	√	0188,0185,0189,0054,0022,0168,0187,0186,0174,0199,0200,02
CITROEN	C3	Gas injection	√	√	√	√	√	
CITROEN	C3	Anti-lock brake system	√	√	√	√	√	0054,0174
CITROEN	C3	Gearbox ECU	√	√	√	√	√	0054,0174,0036,0190,0191,004
CITROEN	C3	Electric power steering ECU	√	√	√	√	√	0054,0174
CITROEN	C3	ECU Reversible 'Stop-Start' alternator	√	√	√	√	√	
CITROEN	C3 R	BSI	√	√	√	√	√	0046,0053,0054,0174,0177,0175,0176
CITROEN	C3 R	Instrument panel	√	√	√	√	√	0054,0174
CITROEN	C3 R	Radio	√	√	√	√	√	0054,0022
CITROEN	C3 R	CD player	√	√	√	√	√	
CITROEN	C3 R	Parking assistance	√	√	√	√	√	0054,0174
CITROEN	C3 R	Air conditioning	√	√	√	√	√	0054,0174
CITROEN	C3 R	Alarm	√	√	√	√	√	0178,0054,0022
CITROEN	C3 R	Switch module under the steering wheel	√	√	√	√	√	
CITROEN	C3 R	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	C3 R	Airbag	√	√	√	√	√	0054,0022
CITROEN	C3 R	Driving school mode	√	√	√	√	√	
CITROEN	C3 R	Multifunction screen	√	√	√	√	√	0054,0022
CITROEN	C3 R	Telematic	√	√	√	√	√	0192,0181,0174,0184
CITROEN	C3 R	High frequency receiver	√	√	√	√	√	
CITROEN	C3 R	Engine ECU	√	√	√	√	√	0054,0174,0168,0185,0186,0022,0187,0188,0189
CITROEN	C3 R	Gas injection	√	√	√	√	√	
CITROEN	C3 R	Multiplexed diesel additive pump	√	√	√	√	√	0022,0054
CITROEN	C3 R	Trailer relay unit	√	√	√	√	√	
CITROEN	C3 R	Engine relay unit	√	√	√	√	√	

CITROEN	C3 R	Anti-lock brake system	√	√	√	√	√	0054,0174
CITROEN	C3 R	Gearbox ECU	√	√	√	√	√	0036,0190,0191,0048
CITROEN	C3 R	Electric power steering ECU	√	√	√	√	√	0054,0174
CITROEN	C3 R	Hands Free Kit	√	√	√	√	√	0054,0022
CITROEN	C3 R	ECU Reversible 'Stop-Start' alternator	√	√	√	√	√	
CITROEN	C3 PLURIEL	BSI	√	√	√	√	√	0046,0053,0054,0173,0174,0175,0176,0177
CITROEN	C3 PLURIEL	Instrument panel	√	√	√	√	√	0054,0174
CITROEN	C3 PLURIEL	Radio	√	√	√	√	√	0054,0174,0022
CITROEN	C3 PLURIEL	CD player	√	√	√	√	√	
CITROEN	C3 PLURIEL	Parking assistance	√	√	√	√	√	0054,0174
CITROEN	C3 PLURIEL	Air conditioning	√	√	√	√	√	0054,0174
CITROEN	C3 PLURIEL	Navigation	√	√	√	√	√	
CITROEN	C3 PLURIEL	Alarm	√	√	√	√	√	0054,0174,0178,0022
CITROEN	C3 PLURIEL	Switch module under the steering wheel	√	√	√	√	√	
CITROEN	C3 PLURIEL	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	C3 PLURIEL	Sun roof	√	√	√	√	√	0054,0174
CITROEN	C3 PLURIEL	Driving school mode	√	√	√	√	√	
CITROEN	C3 PLURIEL	Airbag	√	√	√	√	√	0054,0174,0022
CITROEN	C3 PLURIEL	Display or Telematics	√	√	√	√	√	0054,0174,0179,0180,0181,0182,0183,0184
CITROEN	C3 PLURIEL	Engine ECU	√	√	√	√	√	0168,0174,0054,0185,0186,0022,0187
CITROEN	C3 PLURIEL	Anti-lock brake system	√	√	√	√	√	0054,0174
CITROEN	C3 PLURIEL	Gearbox ECU	√	√	√	√	√	0036,0190,0191,0048
CITROEN	C3 PLURIEL	Electric power steering ECU	√	√	√	√	√	0054,0174
CITROEN	C3 PLURIEL	Multifunction screen	√	√	√	√	√	0054,0022
CITROEN	C3 PLURIEL	Telematic	√	√	√	√	√	0192,0181,0174,0184
CITROEN	C3 PLURIEL	High frequency receiver	√	√	√	√	√	
CITROEN	C3 PLURIEL	Trailer relay unit	√	√	√	√	√	
CITROEN	C3 PLURIEL	Engine relay unit	√	√	√	√	√	
CITROEN	C3 PLURIEL	Hands Free Kit	√	√	√	√	√	0054,0022
CITROEN	C3 PICASSO	BSI	√	√	√	√	√	0046,0053,0054,0174,0177,0175,0176
CITROEN	C3 PICASSO	Seat belt reminder LED	√	√	√	√	√	
CITROEN	C3 PICASSO	Instrument panel	√	√	√	√	√	
CITROEN	C3 PICASSO	Radio	√	√	√	√	√	0054,0022
CITROEN	C3 PICASSO	ABS	√	√	√	√	√	0054,0174,0030
CITROEN	C3 PICASSO	Parking assistance	√	√	√	√	√	0202,0054,0174
CITROEN	C3 PICASSO	Air conditioning	√	√	√	√	√	0054,0022

CITROEN	C3 PICASSO	Alarm	√	√	√	√	√	0178,0054,0022
CITROEN	C3 PICASSO	Switch module under the steering wheel	√	√	√	√	√	
CITROEN	C3 PICASSO	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	C3 PICASSO	Airbag	√	√	√	√	√	0054,0022
CITROEN	C3 PICASSO	Multifunction screen(EMF)	√	√	√	√	√	0054,0022
CITROEN	C3 PICASSO	Telematic	√	√	√	√	√	
CITROEN	C3 PICASSO	Engine ECU	√	√	√	√	√	0174,0168,0203,0204,0205,0206,0207,0208,0209,0210,0211,0212,0213,0214,0215,0054,0216,0217,0218,0219,0220,0221,0087,0188,0185,0189,0022,0187,0222,0223,0224,0225,0226,0227,02
CITROEN	C3 PICASSO	Multiplexed diesel additive pump	√	√	√	√	√	0022,0054
CITROEN	C3 PICASSO	Engine relay unit	√	√	√	√	√	
CITROEN	C3 PICASSO	Trailer relay unit	√	√	√	√	√	
CITROEN	C3 PICASSO	Power steering	√	√	√	√	√	
CITROEN	C3 PICASSO	Hands Free Kit	√	√	√	√	√	0054,0174
CITROEN	C3 PICASSO	Driver's door control panel	√	√	√	√	√	
CITROEN	C3 PICASSO	Services module	√	√	√	√	√	0054,0022
CITROEN	C3 PICASSO	Battery charge status unit	√	√	√	√	√	0054,0174
CITROEN	C3 PICASSO	Gearbox	√	√	√	√	√	
CITROEN	C3 A51	BSI	√	√	√	√	√	0177,0175,0176,0232,0053,0046,0054,0174
CITROEN	C3 A51	Radio	√	√	√	√	√	0054,0022
CITROEN	C3 A51	ABS	√	√	√	√	√	0174,0054,0030
CITROEN	C3 A51	Parking assistance	√	√	√	√	√	0202,0054,0174
CITROEN	C3 A51	Air conditioning	√	√	√	√	√	0054
CITROEN	C3 A51	Alarm	√	√	√	√	√	0178,0054,0022
CITROEN	C3 A51	Switch module under the steering wheel	√	√	√	√	√	
CITROEN	C3 A51	Driving school mode	√	√	√	√	√	
CITROEN	C3 A51	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	C3 A51	Airbag	√	√	√	√	√	0054,0022
CITROEN	C3 A51	Multifunction screen(EMF)	√	√	√	√	√	0054,0022



								0022,0054,0203,0204,0205,0206,0207,0208,0209,0210,0211,0212,0213,0214,0215,0087,0168,0174,0217,0218,0219,0220,0221,0055,0233,0186,0185,0187,0188,0223,0224,0226,0227,0228,02
CITROEN	C3 A51	Engine ECU	√	√	√	√	√	
CITROEN	C3 A51	Gearbox ECU	√	√	√	√	√	0190,0191,0036,0048
CITROEN	C3 A51	Telematic	√	√	√	√	√	
CITROEN	C3 A51	Instrument panel	√	√	√	√	√	0054
CITROEN	C3 A51	Trailer relay unit	√	√	√	√	√	
CITROEN	C3 A51	Engine relay unit	√	√	√	√	√	
CITROEN	C3 A51	Power steering	√	√	√	√	√	
CITROEN	C3 A51	Hands Free Kit	√	√	√	√	√	0054,0174
CITROEN	C3 A51	Driver's door control panel	√	√	√	√	√	
CITROEN	C3 A51	Battery charge status unit	√	√	√	√	√	0054,0174
CITROEN	C3 A51	High frequency receiver	√	√	√	√	√	
CITROEN	C3 A51	Seat belt reminder LED	√	√	√	√	√	
CITROEN	C3 A51	Multiplexed diesel additive pump	√	√	√	√	√	
CITROEN	C3 A51	Services module	√	√	√	√	√	0054,0022
CITROEN	C3 Ai51	Built-in Systems Interface (BSI)	√	√	√	√	√	0004,0055,0233
CITROEN	C3 Ai51	Engine ECU	√	√	√	√	√	0055,0233,0004
CITROEN	C3 Ai51	ABS/traction control	√	√	√	√	√	0004,0233
CITROEN	C3 Ai51	Trailer relay unit	√	√	√	√	√	
CITROEN	C3 Ai51	Telematics	√	√	√	√	√	0004,0055
CITROEN	C3 Ai51	Service module	√	√	√	√	√	
CITROEN	C3 Ai51	Instrument panel	√	√	√	√	√	
CITROEN	C3 Ai51	Radio	√	√	√	√	√	0004,0055
CITROEN	C3 Ai51	Anti-theft alarm	√	√	√	√	√	0004,0233
CITROEN	C3 Ai51	Driver and passenger airbags	√	√	√	√	√	0004,0233
CITROEN	C3 Ai51	Air conditioning	√	√	√	√	√	0004,0233
CITROEN	C3 Ai51	Parking aid	√	√	√	√	√	0004,0055,0233
CITROEN	C3 Ai51	Switch module under the steering wheel	√	√	√	√	√	0233
CITROEN	C3 Ai51	Rain and brightness sensor	√	√	√	√	√	0055
CITROEN	C3 Ai51	Gearbox	√	√	√	√	√	0004,0055,0233
CITROEN	C3 Ai51	Electric power steering	√	√	√	√	√	0055
CITROEN	C3 AIRCROSS	BSI	√	√	√	√	√	0177,0175,0176,0232,0053,0046,0054,0174
CITROEN	C3 AIRCROSS	Trailer relay unit	√	√	√	√	√	
CITROEN	C3 AIRCROSS	Airbag	√	√	√	√	√	0054,0022
CITROEN	C3 AIRCROSS	ABS	√	√	√	√	√	0174,0054

CITROEN	C3 AIRCROSS	Alarm	√	√	√	√	√	0054,0022
CITROEN	C3 AIRCROSS	Telematic	√	√	√	√	√	
CITROEN	C3 AIRCROSS	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	C3 AIRCROSS	Parking assistance	√	√	√	√	√	0202,0054,0174
CITROEN	C3 AIRCROSS	Engine ECU	√	√	√	√	√	0054,0168,0174
CITROEN	C3 AIRCROSS	Radio	√	√	√	√	√	0054,0022
CITROEN	C3 AIRCROSS	Switch module under the steering wheel	√	√	√	√	√	
CITROEN	C3 AIRCROSS	Instrument panel	√	√	√	√	√	
CITROEN	C3 AIRCROSS	Gearbox ECU	√	√	√	√	√	
CITROEN	C3 AIRCROSS	Air conditioning	√	√	√	√	√	0054
CITROEN	C3 AIRCROSS	Services module	√	√	√	√	√	0197,0234
CITROEN	C3 PICASSO (Ai58)	Built-in Systems Interface (BSI)	√	√	√	√	√	0004,0055,0233
CITROEN	C3 PICASSO (Ai58)	Engine ECU	√	√	√	√	√	0055,0233,0004
CITROEN	C3 PICASSO (Ai58)	ABS/traction control	√	√	√	√	√	0004,0233
CITROEN	C3 PICASSO (Ai58)	Trailer relay unit	√	√	√	√	√	
CITROEN	C3 PICASSO (Ai58)	Telematics	√	√	√	√	√	0004,0055
CITROEN	C3 PICASSO (Ai58)	Service module	√	√	√	√	√	
CITROEN	C3 PICASSO (Ai58)	Instrument panel	√	√	√	√	√	
CITROEN	C3 PICASSO (Ai58)	Radio	√	√	√	√	√	0004,0055
CITROEN	C3 PICASSO (Ai58)	Anti-theft alarm	√	√	√	√	√	0004,0233

CITROEN	C3 PICASSO (Ai58)	Driver and passenger airbags	√	√	√	√	√	0004,0233
CITROEN	C3 PICASSO (Ai58)	Air conditioning	√	√	√	√	√	0004,0233
CITROEN	C3 PICASSO (Ai58)	Parking aid	√	√	√	√	√	0004,0055,0233
CITROEN	C3 PICASSO (Ai58)	Switch module under the steering wheel	√	√	√	√	√	0233
CITROEN	C3 PICASSO (Ai58)	Rain and brightness sensor	√	√	√	√	√	0055
CITROEN	C3 PICASSO (Ai58)	Gearbox	√	√	√	√	√	0004,0055,0233
CITROEN	C3 PICASSO (Ai58)	Electric power steering	√	√	√	√	√	0055
CITROEN	C4	BSI	√	√	√	√	√	0046,0053,0054,0174,0177,0175,0176
CITROEN	C4	Instrument panel	√	√	√	√	√	0054,0022
CITROEN	C4	Radio	√	√	√	√	√	0054,0022
CITROEN	C4	CD player	√	√	√	√	√	
CITROEN	C4	Parking assistance	√	√	√	√	√	0054,0174
CITROEN	C4	Air conditioning	√	√	√	√	√	0054,0022
CITROEN	C4	Lane departure warning system	√	√	√	√	√	0054,0174,0151,0235,0236
CITROEN	C4	Alarm	√	√	√	√	√	0178,0054,0022
CITROEN	C4	Steering wheel with fixed central controls	√	√	√	√	√	
CITROEN	C4	Diesel additive function	√	√	√	√	√	0193,0194,0195,0196
CITROEN	C4	Multiplexed diesel additive pump	√	√	√	√	√	0022,0054
CITROEN	C4	Driver's door module	√	√	√	√	√	
CITROEN	C4	Passenger's door module	√	√	√	√	√	
CITROEN	C4	Hi-Fi amplifier	√	√	√	√	√	0054,0022
CITROEN	C4	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	C4	Driving school mode	√	√	√	√	√	
CITROEN	C4	Unit Rev counter	√	√	√	√	√	0054,0022
CITROEN	C4	Driver's seat memorising unit	√	√	√	√	√	0054,0174
CITROEN	C4	Airbag	√	√	√	√	√	0054,0022,0055
CITROEN	C4	Multifunction screen	√	√	√	√	√	0054,0022
CITROEN	C4	Telematic	√	√	√	√	√	0192,0181,0174,0184,0197,019
CITROEN	C4	High frequency receiver	√	√	√	√	√	

								0174,0168,0203,0204,0205,0206,0207,0208,0217,0218,0219,0220,0221,0212,0215,0209,0210,0211,0213,0214,0054,0237,0238,0022,0222,0036,0189,0239,0240,0188,0185,0187,0241,0242,0226,0227,0228,0229,0230,0231,0
CITROEN	C4	Engine ECU	√	√	√	√	√	
CITROEN	C4	Trailer relay unit	√	√	√	√	√	
CITROEN	C4	Engine relay unit	√	√	√	√	√	
CITROEN	C4	Anti-lock brake system	√	√	√	√	√	0054,0174,0019,0017
								0054,0022,0168,0244,0245,0246,0247,0248,0092,0093,0094,0249,0250,0097,0251,0099,0252,0253,0254,0255,0256,0105,0106,
CITROEN	C4	Gearbox ECU	√	√	√	√	√	
CITROEN	C4	Power steering electric pump unit	√	√	√	√	√	0054,0174
CITROEN	C4	Directional headlamps	√	√	√	√	√	0054,0174
CITROEN	C4	Deflation detection	√	√	√	√	√	0258,0259,0260,0261
CITROEN	C4	Hands Free Kit	√	√	√	√	√	0054,0022
CITROEN	C4	Electric secondary brake	√	√	√	√	√	
CITROEN	C4	Automatic gearbox electric control	√	√	√	√	√	
CITROEN	C4	Pneumatic suspension	√	√	√	√	√	
CITROEN	C4 PICASSO	BSI	√	√	√	√	√	0046,0053,0054,0174,0177,0175,0176
CITROEN	C4 PICASSO	Instrument panel	√	√	√	√	√	0054,0022
CITROEN	C4 PICASSO	Radio	√	√	√	√	√	0054,0022
CITROEN	C4 PICASSO	CD player	√	√	√	√	√	
CITROEN	C4 PICASSO	Parking assistance	√	√	√	√	√	0054,0174
CITROEN	C4 PICASSO	Air conditioning	√	√	√	√	√	0054,0174,0262,0263,0264,0265,0266,0267,0268
CITROEN	C4 PICASSO	Lane departure warning system	√	√	√	√	√	0054,0174,0151,0235,0236
CITROEN	C4 PICASSO	Steering wheel with fixed central controls	√	√	√	√	√	
CITROEN	C4 PICASSO	Alarm	√	√	√	√	√	0054,0022
CITROEN	C4 PICASSO	Windscreen wiper	√	√	√	√	√	0054,0022
CITROEN	C4 PICASSO	Additive pump	√	√	√	√	√	0022,0054
CITROEN	C4 PICASSO	Driver's door module	√	√	√	√	√	
CITROEN	C4 PICASSO	Passenger's door module	√	√	√	√	√	

CITROEN	C4 PICASSO	Hi-Fi amplifier	√	√	√	√	√	0054,0022
CITROEN	C4 PICASSO	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	C4 PICASSO	Driver's seat memorising unit	√	√	√	√	√	0054,0174
CITROEN	C4 PICASSO	Airbag	√	√	√	√	√	0054,0022
CITROEN	C4 PICASSO	Telematic	√	√	√	√	√	0192,0181,0174,0184
CITROEN	C4 PICASSO	High frequency receiver	√	√	√	√	√	
CITROEN	C4 PICASSO	Engine ECU	√	√	√	√	√	0174,0168,0203,0204,0205,0206,0207,0208,0217,0218,0219,0220,0221,0212,0215,0054,0216,0087,0209,0210,0211,0213,0214,0188,0185,0189,0022,0187,0036,0239,0241,0242,0269,0223,0270,0224,0226,0227,0228,0229,0
CITROEN	C4 PICASSO	Gearbox ECU	√	√	√	√	√	0054,0022,0168,0244,0245,0246,0247,0248,0092,0093,0094,0249,0250,0097,0251,0099,0252,0253,0254,0255,0256,0105,0106,
CITROEN	C4 PICASSO	Automatic gearbox electric control	√	√	√	√	√	0054,0174,0271,0272,0273
CITROEN	C4 PICASSO	ABS/ Electronic stability program	√	√	√	√	√	0030,0054,0174,0019,0083,0274,0017,0275,0125
CITROEN	C4 PICASSO	Pneumatic suspension	√	√	√	√	√	0276,0277,0159,0054,0022
CITROEN	C4 PICASSO	Power steering electric pump unit	√	√	√	√	√	
CITROEN	C4 PICASSO	Directional headlamps	√	√	√	√	√	0054,0174
CITROEN	C4 PICASSO	Trailer relay unit	√	√	√	√	√	
CITROEN	C4 PICASSO	Engine relay unit	√	√	√	√	√	
CITROEN	C4 PICASSO	Deflation detection	√	√	√	√	√	0258,0259,0260,0261
CITROEN	C4 PICASSO	Electric secondary brake	√	√	√	√	√	0128,0129
CITROEN	C4 PICASSO	Hands Free Kit	√	√	√	√	√	0054,0022
CITROEN	C4 PICASSO	Battery charge status unit	√	√	√	√	√	0054,0174
CITROEN	C4 PICASSO	Ambient interior lighting unit	√	√	√	√	√	
CITROEN	C4 PICASSO	Multifunction display	√	√	√	√	√	

CITROEN	C4 SEDAN	BSI	√	√	√	√	√	0046,0053,0054,0174,0177,0175,0176
CITROEN	C4 SEDAN	Instrument panel	√	√	√	√	√	0054,0022
CITROEN	C4 SEDAN	Radio	√	√	√	√	√	0054,0022
CITROEN	C4 SEDAN	CD player	√	√	√	√	√	
CITROEN	C4 SEDAN	Parking assistance	√	√	√	√	√	0054,0174
CITROEN	C4 SEDAN	Air conditioning	√	√	√	√	√	0054,0022
CITROEN	C4 SEDAN	Switch module under the steering wheel	√	√	√	√	√	
CITROEN	C4 SEDAN	Alarm	√	√	√	√	√	0178,0054,0022
CITROEN	C4 SEDAN	Driver's seat memorising unit	√	√	√	√	√	0054,0174
CITROEN	C4 SEDAN	Driver's door module	√	√	√	√	√	
CITROEN	C4 SEDAN	Passenger's door module	√	√	√	√	√	
CITROEN	C4 SEDAN	Unit Rev counter	√	√	√	√	√	0054,0022
CITROEN	C4 SEDAN	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	C4 SEDAN	Airbag	√	√	√	√	√	0054,0022
CITROEN	C4 SEDAN	Multifunction screen	√	√	√	√	√	0054,0022
CITROEN	C4 SEDAN	Telematic	√	√	√	√	√	0192,0181,0174,0184
CITROEN	C4 SEDAN	Engine ECU	√	√	√	√	√	0054,0174,0168,0188,0185,0189,0022,0187,0226,0227,0228,0229,0230,0231,0243
CITROEN	C4 SEDAN	Gearbox ECU	√	√	√	√	√	0278,0004,0055,0233
CITROEN	C4 SEDAN	ABS	√	√	√	√	√	0054,0174,0019,0083,0017
CITROEN	C4 SEDAN	Trailer relay unit	√	√	√	√	√	
CITROEN	C4 SEDAN	Engine relay unit	√	√	√	√	√	
CITROEN	C4 SEDAN	Multiplexed diesel additive pump	√	√	√	√	√	0022,0054
CITROEN	C4 SEDAN	Electric power steering	√	√	√	√	√	0054,0174
CITROEN	C4 SEDAN	Directional headlamps	√	√	√	√	√	0054,0174
CITROEN	C4 SEDAN	Hands Free Kit	√	√	√	√	√	0054,0022
CITROEN	C4 SEDAN	Automatic gearbox electric control	√	√	√	√	√	
CITROEN	C4 SEDAN	Electric secondary brake	√	√	√	√	√	0233
CITROEN	C4 SEDAN	Pneumatic suspension	√	√	√	√	√	
CITROEN	C4 SEDAN	Under inflation detection	√	√	√	√	√	0055,0233
CITROEN	C4(B7)	Instrument panel	√	√	√	√	√	0004
CITROEN	C4(B7)	Display	√	√	√	√	√	0004,0233
CITROEN	C4(B7)	Trailer relay unit	√	√	√	√	√	0055
CITROEN	C4(B7)	Driver's seat memorizing unit	√	√	√	√	√	0004
CITROEN	C4(B7)	Steering wheel with integral controls (VCI)	√	√	√	√	√	
CITROEN	C4(B7)	Parking aid	√	√	√	√	√	0004,0055,0038
CITROEN	C4(B7)	Audio amplifier	√	√	√	√	√	0004,0055,0233
CITROEN	C4(B7)	Telematics	√	√	√	√	√	0004,0055
CITROEN	C4(B7)	Matrix screen integral to the instrument panel	√	√	√	√	√	0004,0055,0233

CITROEN	C4(B7)	Driver's door module	√	√	√	√	√	
CITROEN	C4(B7)	Switch module under the steering wheel	√	√	√	√	√	0030
CITROEN	C4(B7)	Lane departure warning system	√	√	√	√	√	0004,0233
CITROEN	C4(B7)	Gearbox	√	√	√	√	√	0004,0055,0021,0027,0233,003
CITROEN	C4(B7)	Electric secondary brake	√	√	√	√	√	0055,0233
CITROEN	C4(B7)	Power steering electric pump unit	√	√	√	√	√	0055
CITROEN	C4(B7)	Anti-theft alarm	√	√	√	√	√	0004
CITROEN	C4(B7)	Multiplexed control panel	√	√	√	√	√	
CITROEN	C4(B7)	Monitoring of the blind spot	√	√	√	√	√	
CITROEN	C4(B7)	Engine ECU	√	√	√	√	√	0004,0279,0030,0054,0280,0231,0225,0034,0281,0282,0283,0284,0285,0286,0287,0288,0289,0290,0291,0292,0293,0294,0295,0296,0297,0298,0299,0300,0088,0301,0302,0303,0304,0305,0056,0306,0057,0307,0148,0308,0309,0310,0311,0312,0313,0021,
CITROEN	C4(B7)	Discharge bulbs vertical and horizontal adjustment	√	√	√	√	√	
CITROEN	C4(B7)	Engine relay unit	√	√	√	√	√	
CITROEN	C4(B7)	Independent telematic unit	√	√	√	√	√	
CITROEN	C4(B7)	Multiplexed additive adding pump	√	√	√	√	√	
CITROEN	C4(B7)	ABS/traction control	√	√	√	√	√	0314,0004,0017,0083,0275,012
CITROEN	C4(B7)	Battery charge status unit	√	√	√	√	√	
CITROEN	C4(B7)	Driving school module	√	√	√	√	√	
CITROEN	C4(B7)	Supply protection and management unit	√	√	√	√	√	
CITROEN	C4(B7)	Voltage retaining device	√	√	√	√	√	0055
CITROEN	C4(B7)	Under inflation detection	√	√	√	√	√	0055,0039,0315,0043,0040,0044
CITROEN	C4(B7)	Air conditioning ECU	√	√	√	√	√	0136
CITROEN	C4(B7)	Rain sensor	√	√	√	√	√	0135
CITROEN	C4(B7)	Radio	√	√	√	√	√	0004
CITROEN	C4(B7)	Built-in Systems Interface	√	√	√	√	√	0046,0053,0004,0030,0036
CITROEN	C4(B7)	Air bags	√	√	√	√	√	0012,0013
CITROEN	C4(B7)	Seat belts not fastened LED unit	√	√	√	√	√	
CITROEN	C4 L(B7)	Built-in Systems Interface	√	√	√	√	√	0046,0053,0004,0030,0036

CITROEN	C4 L(B7)	Engine ECU	√	√	√	√	√	0004,0279,0030,0021,0059,0060,0061
CITROEN	C4 L(B7)	ABS/traction control	√	√	√	√	√	0004,0017,0083,0314,0275,012
CITROEN	C4 L(B7)	Gearbox	√	√	√	√	√	0004,0055,0021,0027,0233,003
CITROEN	C4 L(B7)	Power steering electric pump unit	√	√	√	√	√	0055
CITROEN	C4 L(B7)	Instrument panel	√	√	√	√	√	0004
CITROEN	C4 L(B7)	Hands free starting access electronic module	√	√	√	√	√	0054,0055,0133,0036,0030
CITROEN	C4 L(B7)	Anti-theft alarm	√	√	√	√	√	0004
CITROEN	C4 L(B7)	Air bags	√	√	√	√	√	0012,0013
CITROEN	C4 L(B7)	Supply protection and management unit	√	√	√	√	√	
CITROEN	C4 L(B7)	Engine relay unit	√	√	√	√	√	
CITROEN	C4 L(B7)	Electric steering lock	√	√	√	√	√	
CITROEN	C4 L(B7)	Matrix screen integral to the instrument panel	√	√	√	√	√	0004,0055,0233
CITROEN	C4 L(B7)	Radio	√	√	√	√	√	0004
CITROEN	C4 L(B7)	Air conditioning ECU	√	√	√	√	√	0136
CITROEN	C4 L(B7)	Telematics	√	√	√	√	√	0004,0055
CITROEN	C4 L(B7)	Multiplexed control panel	√	√	√	√	√	
CITROEN	C4 L(B7)	Switch module under the steering wheel	√	√	√	√	√	0030
CITROEN	C4 L(B7)	Rain sensor	√	√	√	√	√	0135
CITROEN	C4 L(B7)	Electronic key reader	√	√	√	√	√	
CITROEN	C4 L(B7)	Under inflation detection	√	√	√	√	√	0055,0039,0315,0043,0040,0044
CITROEN	C4 L(B7)	Steering wheel with integral controls (VCI)	√	√	√	√	√	
CITROEN	C4 L(B7)	Parking aid	√	√	√	√	√	0004,0055,0038
CITROEN	C4 L(B7)	Battery charge status unit	√	√	√	√	√	
CITROEN	C4 L(B7)	Display	√	√	√	√	√	0004,0233
CITROEN	C4 Aircross	Parking aid	√	√	√	√	√	
CITROEN	C4 Aircross	ABS/traction control	√	√	√	√	√	0004,0151,0030
CITROEN	C4 Aircross	Driver and passenger airbags	√	√	√	√	√	
CITROEN	C4 Aircross	Driver's door module	√	√	√	√	√	
CITROEN	C4 Aircross	Rain and brightness sensor	√	√	√	√	√	
CITROEN	C4 Aircross	Anti-theft alarm	√	√	√	√	√	
CITROEN	C4 Aircross	Power steering	√	√	√	√	√	
CITROEN	C4 Aircross	Instrument panel	√	√	√	√	√	
CITROEN	C4 Aircross	Starting authorisation ECU	√	√	√	√	√	
CITROEN	C4 Aircross	Radio or radiotelephone (radio part)	√	√	√	√	√	



								0054,0316,0317,0318,0319,0194,0310,0320,0321,0322,0197,0187,0280,0302,0303,0304,0305,034,0281,0282,0283,0284,0285,0286,0288,0289,0290,0293,0323,0296,0299,0300,0291,0292,03
CITROEN	C4 Aircross	Engine ECU	√	√	√	√	√	
CITROEN	C4 Aircross	Rear final drive piloted clutch	√	√	√	√	√	
CITROEN	C4 Aircross	Directional headlamps	√	√	√	√	√	
CITROEN	C4 Aircross	Locking and immobiliser control module	√	√	√	√	√	
CITROEN	C4 Aircross	Calculateur stop and start	√	√	√	√	√	
CITROEN	C4 Aircross	Steering wheel angle sensor	√	√	√	√	√	0325
CITROEN	C4 Aircross	Heating/ventilation	√	√	√	√	√	
CITROEN	C4 Aircross	Gearbox	√	√	√	√	√	
CITROEN	C4 Aircross	Built-in Systems Interface	√	√	√	√	√	
CITROEN	C4 Aircross	Navigation	√	√	√	√	√	
CITROEN	C4 PICASSO(B78)	BSI	√	√	√	√	√	0046,0053,0004,0030,0036
CITROEN	C4 PICASSO(B78)	Engine ECU	√	√	√	√	√	0054,0280,0231,0225,0034,0281,0282,0283,0284,0285,0286,0287,0288,0289,0290,0291,0292,0293,0294,0295,0296,0297,0298,0299,0300,0088,0301,0302,0303,0304,0305,0004,0279,0030
CITROEN	C4 PICASSO(B78)	Gearbox	√	√	√	√	√	0055,0233
CITROEN	C4 PICASSO(B78)	ABS	√	√	√	√	√	
CITROEN	C4 PICASSO(B78)	Engine relay unit	√	√	√	√	√	
CITROEN	C4 PICASSO(B78)	Trailer relay unit	√	√	√	√	√	
CITROEN	C4 PICASSO(B78)	CD player	√	√	√	√	√	
CITROEN	C4 PICASSO(B78)	Audio amplifier	√	√	√	√	√	
CITROEN	C4 PICASSO(B78)	Switch module under the steering wheel (Top of column)	√	√	√	√	√	0233

CITROEN	C4 PICASSO(B7 8)	Steering wheel with integral controls (VCI)	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Discharge bulbs vertical and horizontal adjustment	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Multifunction camera or multifunction video camera	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Anti-theft alarm	√	√	√	√	√	0004,0233
CITROEN	C4 PICASSO(B7 8)	Siren	√	√	√	√	√	0004
CITROEN	C4 PICASSO(B7 8)	Left hand front wiper motor	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Right hand front wiper motor	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Control panel	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Telematics unit	√	√	√	√	√	0004,0055
CITROEN	C4 PICASSO(B7 8)	Vehicle Distance Assistance	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Air conditioning	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Driver's seat memorizing unit	√	√	√	√	√	0004
CITROEN	C4 PICASSO(B7 8)	Rain and brightness sensor	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Airbag	√	√	√	√	√	0004,0233
CITROEN	C4 PICASSO(B7 8)	RH reversible seat belt reel	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	LH reversible seat belt reel	√	√	√	√	√	

CITROEN	C4 PICASSO(B7 8)	Battery charge status unit	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Multiplexed control panel	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Parking aid	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Electronic key reader	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Electric steering lock	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Signalling fuse box	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Door control pad	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Supply protection and management unit	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Automatic gearbox electric control	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Hands free starting access electronic module	√	√	√	√	√	0054,0055,0036,0030
CITROEN	C4 PICASSO(B7 8)	Independent telematic unit (BTA)	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Electric power steering	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Central voltage retention device	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Motorised Boot ECU	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Diesel additive function	√	√	√	√	√	
CITROEN	C4 PICASSO(B7 8)	Additional heating	√	√	√	√	√	

CITROEN	C4 PICASSO(B7 8)	Panoramic visual assistance front camera	√	√	√	√	√	
CITROEN	C5	BSI	√	√	√	√	√	0054,0174,0175,0326,0327,0328,0329,0330,0331,0332,0333
CITROEN	C5	Navigation	√	√	√	√	√	0334,0335
CITROEN	C5	Instrument panel	√	√	√	√	√	0054,0174
CITROEN	C5	Air conditioning	√	√	√	√	√	0054,0174
CITROEN	C5	Radio post-equipment	√	√	√	√	√	0054,0174
CITROEN	C5	Car-phone	√	√	√	√	√	0054,0174
CITROEN	C5	CD player	√	√	√	√	√	
CITROEN	C5	Parking assistance	√	√	√	√	√	
CITROEN	C5	Sun roof	√	√	√	√	√	
CITROEN	C5	Alarm	√	√	√	√	√	0054,0174
CITROEN	C5	Switch module at the steering wheel	√	√	√	√	√	
CITROEN	C5	Driver's door module	√	√	√	√	√	
CITROEN	C5	Passenger's door module	√	√	√	√	√	
CITROEN	C5	Diesel additive function	√	√	√	√	√	0054,0174,0193,0194,0195,019
CITROEN	C5	Airbag	√	√	√	√	√	0054,0174
CITROEN	C5	Display or Autopc or Telematics	√	√	√	√	√	0054,0174,0179,0180,0181,0182,0183,0184
CITROEN	C5	Engine ECU	√	√	√	√	√	0336,0054,0174,0207,0337,016
CITROEN	C5	Anti-lock brake system	√	√	√	√	√	0054,0174
CITROEN	C5	Suspension	√	√	√	√	√	0054,0174
CITROEN	C5	Auto gearbox	√	√	√	√	√	0054,0174,0168
CITROEN	C5	Additional heating	√	√	√	√	√	0338
CITROEN	C5	Right-hand headlamp	√	√	√	√	√	
CITROEN	C5	Left-hand headlamp	√	√	√	√	√	
CITROEN	C5 R	BSI	√	√	√	√	√	0046,0053,0054,0174,0175,017
CITROEN	C5 R	Instrument panel	√	√	√	√	√	0054,0174
CITROEN	C5 R	Radio	√	√	√	√	√	0054,0022
CITROEN	C5 R	CD player	√	√	√	√	√	
CITROEN	C5 R	Parking assistance	√	√	√	√	√	0054,0174
CITROEN	C5 R	Air conditioning	√	√	√	√	√	
CITROEN	C5 R	Lane departure warning system	√	√	√	√	√	0054,0174,0151,0235,0236
CITROEN	C5 R	Alarm	√	√	√	√	√	0054,0022,0178
CITROEN	C5 R	Switch module under the steering wheel	√	√	√	√	√	
CITROEN	C5 R	Diesel additive function	√	√	√	√	√	0193,0194,0195,0196
CITROEN	C5 R	Driver's door module	√	√	√	√	√	
CITROEN	C5 R	Passenger's door module	√	√	√	√	√	
CITROEN	C5 R	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	C5 R	Sun roof	√	√	√	√	√	0054,0174
CITROEN	C5 R	Airbag	√	√	√	√	√	0054,0022
CITROEN	C5 R	Multifunction screen	√	√	√	√	√	0054,0022
CITROEN	C5 R	Telematic	√	√	√	√	√	0192,0181,0174,0184

CITROEN	C5 R	Engine ECU	√	√	√	√	√	0054,0174,0168,0279,0185,0241,0022,0187,0188,0239,0036,02
CITROEN	C5 R	Trailer relay unit	√	√	√	√	√	
CITROEN	C5 R	Engine relay unit	√	√	√	√	√	
CITROEN	C5 R	Anti-lock brake system	√	√	√	√	√	0054,0174
CITROEN	C5 R	Suspension	√	√	√	√	√	0054,0174
CITROEN	C5 R	Gearbox ECU	√	√	√	√	√	0054,0174,0168,0022,0244,0245,0246,0247,0248
CITROEN	C5 R	Additional heating	√	√	√	√	√	0338
CITROEN	C5 R	Power steering	√	√	√	√	√	
CITROEN	C5 R	Directional headlamps	√	√	√	√	√	0054,0174
CITROEN	C5 R	Deflation detection	√	√	√	√	√	0258,0259,0260,0261
CITROEN	C5 R	Hands Free Kit	√	√	√	√	√	0054,0022
CITROEN	C5 (X7)	BSI	√	√	√	√	√	0046,0053,0054,0174,0177,0175,0176,0232
CITROEN	C5 (X7)	Engine ECU	√	√	√	√	√	0004,0237,0080,0030,0055,0021,0033,0339,0088,0340,0123,0188,0185,0189,0054,0022,0168,0187,0052,0036,0341,0003,0056,0035,0342,0279,0122
CITROEN	C5 (X7)	Instrument panel	√	√	√	√	√	0054,0022
CITROEN	C5 (X7)	Seat belt reminder LED	√	√	√	√	√	
CITROEN	C5 (X7)	Radio	√	√	√	√	√	0004,0055
CITROEN	C5 (X7)	CD player	√	√	√	√	√	
CITROEN	C5 (X7)	ABS	√	√	√	√	√	0004,0343,0124
CITROEN	C5 (X7)	Parking assistance	√	√	√	√	√	0004,0030
CITROEN	C5 (X7)	Air conditioning	√	√	√	√	√	0054,0174
CITROEN	C5 (X7)	Alarm	√	√	√	√	√	0178,0054,0022
CITROEN	C5 (X7)	Windscreen wiper	√	√	√	√	√	0054,0022
CITROEN	C5 (X7)	Driver's seat memorising unit	√	√	√	√	√	0054,0174
CITROEN	C5 (X7)	Lane departure warning system	√	√	√	√	√	0004,0036
CITROEN	C5 (X7)	Steering wheel with fixed central controls	√	√	√	√	√	
CITROEN	C5 (X7)	Hi-Fi amplifier	√	√	√	√	√	0054,0022
CITROEN	C5 (X7)	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	C5 (X7)	Airbag	√	√	√	√	√	0004,0012,0013
CITROEN	C5 (X7)	Multifunction screen	√	√	√	√	√	0054,0022
CITROEN	C5 (X7)	Telematic	√	√	√	√	√	0192,0181,0174,0184
CITROEN	C5 (X7)	Gearbox ECU	√	√	√	√	√	0004,0237,0027,0037,0344,0030,0092,0093,0094,0249,0250,0097,0098,0099,0100,0101,0102,0103,0104,0105,0106
CITROEN	C5 (X7)	Suspension	√	√	√	√	√	0004,0345,0277
CITROEN	C5 (X7)	Suspension System Control ECU	√	√	√	√	√	0345
CITROEN	C5 (X7)	Additional heating	√	√	√	√	√	0338
CITROEN	C5 (X7)	Trailer relay unit	√	√	√	√	√	
CITROEN	C5 (X7)	Engine relay unit	√	√	√	√	√	

CITROEN	C5 (X7)	Power steering	√	√	√	√	√	
CITROEN	C5 (X7)	Directional headlamps	√	√	√	√	√	0004,0346
CITROEN	C5 (X7)	Electric secondary brake	√	√	√	√	√	0129
CITROEN	C5 (X7)	Hands Free Kit	√	√	√	√	√	0054,0022
CITROEN	C5 (X7)	Driver's door control panel	√	√	√	√	√	
CITROEN	C5 (X7)	Battery charge status unit	√	√	√	√	√	0054,0174
CITROEN	C5 (X7)	Deflation detection	√	√	√	√	√	0258,0259,0260,0261
CITROEN	C5 (X7)	Motorised Boot ECU	√	√	√	√	√	0347,0348,0349,0350
CITROEN	C5 (X7)	Services module	√	√	√	√	√	0086,0004
CITROEN	C5 (X7)	BASHE 5	√	√	√	√	√	
CITROEN	C5 (X7)	Active damper electronic unit	√	√	√	√	√	0004,0124,0127
CITROEN	C5 (X7)	High frequency receiver	√	√	√	√	√	
CITROEN	C5 (X7)	Central voltage retention device	√	√	√	√	√	
CITROEN	C6	BSI	√	√	√	√	√	0046,0053,0054,0174,0177,0175,0176
CITROEN	C6	Instrument panel	√	√	√	√	√	0054,0174
CITROEN	C6	Radio	√	√	√	√	√	0054,0022
CITROEN	C6	CD player	√	√	√	√	√	
CITROEN	C6	Parking assistance	√	√	√	√	√	0054,0174
CITROEN	C6	Air conditioning	√	√	√	√	√	
CITROEN	C6	Rear air conditioning table	√	√	√	√	√	
CITROEN	C6	Lane departure warning system	√	√	√	√	√	0054,0174,0151,0235,0236
CITROEN	C6	Alarm	√	√	√	√	√	0178,0054,0022
CITROEN	C6	Windscreen wiper	√	√	√	√	√	0054,0022
CITROEN	C6	Switch module under the steering wheel	√	√	√	√	√	
CITROEN	C6	LH seat switch panel	√	√	√	√	√	0054,0174
CITROEN	C6	RH seat switch panel	√	√	√	√	√	0054,0174
CITROEN	C6	Driver's door module	√	√	√	√	√	
CITROEN	C6	Passenger's door module	√	√	√	√	√	
CITROEN	C6	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	C6	Driver's seat memorising unit	√	√	√	√	√	0054,0174
CITROEN	C6	Passenger's seat memorizing unit	√	√	√	√	√	0054,0174
CITROEN	C6	Rear seat memorising unit	√	√	√	√	√	0054,0174
CITROEN	C6	Airbag	√	√	√	√	√	0054,0022
CITROEN	C6	Multifunction screen	√	√	√	√	√	0054,0022
CITROEN	C6	Telematic	√	√	√	√	√	0192,0181,0174,0184
CITROEN	C6	Engine ECU	√	√	√	√	√	0054,0174,0168,0279,0185,0241,0022,0187,0036,0239,0189,0222,0230,0270,0351,0352,0353,0

CITROEN	C6	Anti-lock brake system	√	√	√	√	√	0054,0174,0019,0083,0017
CITROEN	C6	Suspension	√	√	√	√	√	0054,0174
CITROEN	C6	Variable damping	√	√	√	√	√	0355,0345,0356
CITROEN	C6	Gearbox ECU	√	√	√	√	√	0054,0022,0168,0244,0245,0246,0247,0248,0257
CITROEN	C6	Pedestrian impact detection	√	√	√	√	√	0054,0022
CITROEN	C6	Trailer relay unit	√	√	√	√	√	
CITROEN	C6	Engine relay unit	√	√	√	√	√	
CITROEN	C6	Boot relay unit	√	√	√	√	√	
CITROEN	C6	Boot moving deflector	√	√	√	√	√	
CITROEN	C6	Additional heating	√	√	√	√	√	0338
CITROEN	C6	Power steering	√	√	√	√	√	
CITROEN	C6	Directional headlamps	√	√	√	√	√	0054,0174
CITROEN	C6	Headlamp beam corrector	√	√	√	√	√	0054,0022
CITROEN	C6	Deflation detection	√	√	√	√	√	0258,0259,0260,0261
CITROEN	C6	Electric secondary brake	√	√	√	√	√	0054,0174
CITROEN	C6	Hands Free Kit	√	√	√	√	√	0054,0022
CITROEN	C6	Battery charge status unit	√	√	√	√	√	0054,0174
CITROEN	C6	High Head Vision	√	√	√	√	√	0054,0174
CITROEN	C8	BSI	√	√	√	√	√	0046,0053,0054,0174,0064,035
CITROEN	C8	Instrument panel	√	√	√	√	√	
CITROEN	C8	Radio or telematic receiver command	√	√	√	√	√	0054,0174
CITROEN	C8	CD player	√	√	√	√	√	
CITROEN	C8	Parking assistance	√	√	√	√	√	
CITROEN	C8	Air conditioning	√	√	√	√	√	0054,0174
CITROEN	C8	LEDs and odometer ECU	√	√	√	√	√	
CITROEN	C8	Memory unit	√	√	√	√	√	
CITROEN	C8	Rear sunroof	√	√	√	√	√	
CITROEN	C8	Front sunroof	√	√	√	√	√	
CITROEN	C8	Middle sunroof	√	√	√	√	√	
CITROEN	C8	Alarm	√	√	√	√	√	0054,0174
CITROEN	C8	Switch module at the steering wheel	√	√	√	√	√	
CITROEN	C8	Sliding side doors module	√	√	√	√	√	
CITROEN	C8	Driver's door module	√	√	√	√	√	
CITROEN	C8	Passenger's door module	√	√	√	√	√	
CITROEN	C8	Diesel additive function	√	√	√	√	√	0054,0174,0193,0194,0195,019
CITROEN	C8	Airbag	√	√	√	√	√	0054,0174
CITROEN	C8	Display or Telematics	√	√	√	√	√	0054,0174,0179,0180,0181,0182,0183,0184
CITROEN	C8	Engine ECU	√	√	√	√	√	0336,0054,0174,0207,0337,016
CITROEN	C8	Anti-lock brake system	√	√	√	√	√	0054,0174
CITROEN	C8	Auto gearbox	√	√	√	√	√	0054,0174,0168
CITROEN	C8	Additional heating	√	√	√	√	√	0338

CITROEN	C8	Right-hand headlamp	√	√	√	√	√	
CITROEN	C8	Left-hand headlamp	√	√	√	√	√	
CITROEN	C8 CAN	BSI	√	√	√	√	√	0046,0053,0054,0174,0177,0175,0176
CITROEN	C8 CAN	Instrument panel	√	√	√	√	√	
CITROEN	C8 CAN	Radio	√	√	√	√	√	0054,0022,0004,0030,0055
CITROEN	C8 CAN	CD player	√	√	√	√	√	
CITROEN	C8 CAN	Parking assistance	√	√	√	√	√	0054,0174
CITROEN	C8 CAN	Air conditioning	√	√	√	√	√	
CITROEN	C8 CAN	LEDs and odometer ECU	√	√	√	√	√	0054,0174
CITROEN	C8 CAN	Alarm	√	√	√	√	√	0178,0054,0022
CITROEN	C8 CAN	Switch module under the steering wheel	√	√	√	√	√	
CITROEN	C8 CAN	Diesel additive function	√	√	√	√	√	0193,0194,0195,0196
CITROEN	C8 CAN	Sliding side doors module	√	√	√	√	√	0054,0174
CITROEN	C8 CAN	Driver's door module	√	√	√	√	√	
CITROEN	C8 CAN	Passenger's door module	√	√	√	√	√	
CITROEN	C8 CAN	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	C8 CAN	Front sunroof	√	√	√	√	√	0054,0174
CITROEN	C8 CAN	Rear sunroof	√	√	√	√	√	0054,0174
CITROEN	C8 CAN	Middle sunroof	√	√	√	√	√	0054,0174
CITROEN	C8 CAN	Memory unit	√	√	√	√	√	0054,0174
CITROEN	C8 CAN	Airbag	√	√	√	√	√	0054,0022
CITROEN	C8 CAN	Telematic receiver command	√	√	√	√	√	
CITROEN	C8 CAN	Multifunction screen	√	√	√	√	√	0054,0022,0004,0233
CITROEN	C8 CAN	Telematic	√	√	√	√	√	0192,0180,0181,0183,0054,0174,0184
CITROEN	C8 CAN	Engine ECU	√	√	√	√	√	0054,0174,0168,0279,0185,0241,0022,0187,0336,0207,0337,0036,0239,0269,0223,0270,0224,0307,0148,0231,0308,0302,0303,0304,0305,0034,0309,0281,0282,0283,0284,0286,0287,0289,0290,0310,0311,0312,0293,0294,0313,0288,0296,0291,0292,0298,
CITROEN	C8 CAN	Trailer relay unit	√	√	√	√	√	
CITROEN	C8 CAN	Engine relay unit	√	√	√	√	√	
CITROEN	C8 CAN	Anti-lock brake system	√	√	√	√	√	0054,0174,0019,0083,0017
CITROEN	C8 CAN	Gearbox ECU	√	√	√	√	√	0054,0022,0168,0244,0245,0246,0247,0248,0257
CITROEN	C8 CAN	Additional heating	√	√	√	√	√	0338
CITROEN	C8 CAN	Passenger seat memorisation unit	√	√	√	√	√	
CITROEN	C8 CAN	Right-hand headlamp	√	√	√	√	√	
CITROEN	C8 CAN	Left-hand headlamp	√	√	√	√	√	
CITROEN	C8 CAN	Deflation detection	√	√	√	√	√	0258,0259,0260,0261
CITROEN	C8 CAN	Hands Free Kit	√	√	√	√	√	0054,0022



CITROEN	C8 CAN	Power steering	√	√	√	√	√	
CITROEN	C15	Engine	√	√	√	√	√	0054,0168
CITROEN	DS3	BSI	√	√	√	√	√	0177,0175,0176,0232,0053,0046,0054,0174
CITROEN	DS3	Trailer relay unit	√	√	√	√	√	
CITROEN	DS3	Engine relay unit	√	√	√	√	√	
CITROEN	DS3	Electric power steering	√	√	√	√	√	
CITROEN	DS3	Telematic	√	√	√	√	√	
CITROEN	DS3	Engine ECU	√	√	√	√	√	0203,0204,0205,0206,0207,0208,0209,0210,0211,0212,0213,0214,0215,0087,0054,0168,0174,0217,0218,0219,0220,0221,0055,0233,0222,0022,0223,0224,0187,0226,0227,0228,0229,0230,0231
CITROEN	DS3	Gearbox ECU	√	√	√	√	√	0190,0191,0036,0048
CITROEN	DS3	Air conditioning	√	√	√	√	√	0054
CITROEN	DS3	Alarm	√	√	√	√	√	0178,0054,0022
CITROEN	DS3	Hands Free Kit	√	√	√	√	√	0054,0174
CITROEN	DS3	Radio	√	√	√	√	√	0054,0022
CITROEN	DS3	ABS	√	√	√	√	√	0054,0174,0030
CITROEN	DS3	Airbag	√	√	√	√	√	0054,0022
CITROEN	DS3	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	DS3	Switch module under the steering wheel	√	√	√	√	√	
CITROEN	DS3	Parking assistance	√	√	√	√	√	0202,0054,0174
CITROEN	DS3	High frequency receiver	√	√	√	√	√	
CITROEN	DS3	Seat belt reminder LED	√	√	√	√	√	
CITROEN	DS3	Multifunction screen(EMF)	√	√	√	√	√	0054,0022
CITROEN	DS3	Battery charge status unit	√	√	√	√	√	0054,0174
CITROEN	DS3	Instrument panel	√	√	√	√	√	0054
CITROEN	DS3	Multiplexed diesel additive pump	√	√	√	√	√	
CITROEN	DS3	Services module	√	√	√	√	√	0054,0022
CITROEN	DS4	Instrument panel	√	√	√	√	√	0004
CITROEN	DS4	Display	√	√	√	√	√	0004,0233
CITROEN	DS4	Trailer relay unit	√	√	√	√	√	0055
CITROEN	DS4	Driver's seat memorizing unit	√	√	√	√	√	0004
CITROEN	DS4	Steering wheel with integral controls (VCI)	√	√	√	√	√	
CITROEN	DS4	Parking aid	√	√	√	√	√	0004,0055,0038
CITROEN	DS4	Audio amplifier	√	√	√	√	√	0004,0055,0233
CITROEN	DS4	Telematics	√	√	√	√	√	0004,0055
CITROEN	DS4	Matrix screen integral to the instrument panel	√	√	√	√	√	0004,0055,0233
CITROEN	DS4	Driver's door module	√	√	√	√	√	
CITROEN	DS4	Switch module under the steering wheel	√	√	√	√	√	0030

CITROEN	DS4	Lane departure warning system	√	√	√	√	√	0004,0233
CITROEN	DS4	Gearbox	√	√	√	√	√	0004,0055,0021,0027,0233,003
CITROEN	DS4	Electric secondary brake	√	√	√	√	√	0055,0233
CITROEN	DS4	Power steering electric pump unit	√	√	√	√	√	0055
CITROEN	DS4	Anti-theft alarm	√	√	√	√	√	0004
CITROEN	DS4	Multiplexed control panel	√	√	√	√	√	
CITROEN	DS4	Monitoring of the blind spot	√	√	√	√	√	
CITROEN	DS4	Engine ECU	√	√	√	√	√	0004,0279,0030,0054,0280,0231,0225,0034,0281,0282,0283,0284,0285,0286,0287,0288,0289,0290,0291,0292,0293,0294,0295,0296,0297,0298,0299,0300,0088,0301,0302,0303,0304,0305,0056,0306,0057,0307,0148,0308,0309,0310,0311,0312,0313,0021,
CITROEN	DS4	Discharge bulbs vertical and horizontal adjustment	√	√	√	√	√	
CITROEN	DS4	Engine relay unit	√	√	√	√	√	
CITROEN	DS4	Independent telematic unit	√	√	√	√	√	
CITROEN	DS4	Multiplexed additive adding pump	√	√	√	√	√	
CITROEN	DS4	ABS/traction control	√	√	√	√	√	0314,0004,0017,0083,0275,012
CITROEN	DS4	Battery charge status unit	√	√	√	√	√	
CITROEN	DS4	Driving school module	√	√	√	√	√	
CITROEN	DS4	Supply protection and management unit	√	√	√	√	√	
CITROEN	DS4	Voltage retaining device	√	√	√	√	√	0055
CITROEN	DS4	Under inflation detection	√	√	√	√	√	0055,0039,0315,0043,0040,0044
CITROEN	DS4	Air conditioning ECU	√	√	√	√	√	0136
CITROEN	DS4	Rain sensor	√	√	√	√	√	0135
CITROEN	DS4	Radio	√	√	√	√	√	0004
CITROEN	DS4	Built-in Systems Interface	√	√	√	√	√	0046,0053,0004,0030,0036
CITROEN	DS4	Air bags	√	√	√	√	√	0012,0013
CITROEN	DS4	Seat belts not fastened LED unit	√	√	√	√	√	
CITROEN	DS5	Built-in Systems Interface	√	√	√	√	√	

								0054,0280,0231,0225,0034,0281,0282,0283,0284,0285,0286,0287,0288,0289,0290,0291,0292,0293,0294,0295,0296,0297,0298,0299,0300,0088,0301,0302,0303,0304,0305,0307,0148,0308,0309,0310,0311,0312,0313,0004,0
CITROEN	DS5	Engine ECU	√	√	√	√	√	
CITROEN	DS5	Gearbox	√	√	√	√	√	
CITROEN	DS5	ABS/traction control	√	√	√	√	√	0314,0275,0125
CITROEN	DS5	Power steering electric pump unit	√	√	√	√	√	
CITROEN	DS5	Electric steering lock	√	√	√	√	√	
CITROEN	DS5	Multiplexed additive adding pump	√	√	√	√	√	
CITROEN	DS5	Service module	√	√	√	√	√	
CITROEN	DS5	Supply protection and management unit	√	√	√	√	√	
CITROEN	DS5	Battery charge status unit	√	√	√	√	√	
CITROEN	DS5	Telematic navigator	√	√	√	√	√	
CITROEN	DS5	Electric secondary brake	√	√	√	√	√	0233
CITROEN	DS5	Trailer relay unit	√	√	√	√	√	
CITROEN	DS5	Electronic key reader	√	√	√	√	√	
CITROEN	DS5	Seat belts not fastened LED unit(TNB)	√	√	√	√	√	
CITROEN	DS5	Instrument panel	√	√	√	√	√	
CITROEN	DS5	Display	√	√	√	√	√	
CITROEN	DS5	Matrix screen integral to the instrument panel	√	√	√	√	√	
CITROEN	DS5	Anti-theft alarm	√	√	√	√	√	
CITROEN	DS5	Vibrators control ECU	√	√	√	√	√	
CITROEN	DS5	Switch module under the steering wheel (Top of column)	√	√	√	√	√	
CITROEN	DS5	Hands-free control unit	√	√	√	√	√	
CITROEN	DS5	Rain sensor	√	√	√	√	√	
CITROEN	DS5	Hybrid mode selector	√	√	√	√	√	
CITROEN	DS5	Traction battery ECU	√	√	√	√	√	
CITROEN	DS5	Hybrid control ECU 1	√	√	√	√	√	
CITROEN	DS5	Hybrid control ECU 2	√	√	√	√	√	
CITROEN	DS5	Under inflation detection (DSG)	√	√	√	√	√	0055,0233
CITROEN	DS5	Parking aid	√	√	√	√	√	
CITROEN	DS5	Driver's seat memorizing unit	√	√	√	√	√	
CITROEN	DS5	Voltage retaining device	√	√	√	√	√	0055
CITROEN	DS5	High Head Vision	√	√	√	√	√	
CITROEN	DS5	Multifunction camera or multifunction video camera	√	√	√	√	√	

CITROEN	DS5	Air conditioning	√	√	√	√	√	
CITROEN	DS5	Audio amplifier	√	√	√	√	√	
CITROEN	DS5	Discharge bulbs vertical and horizontal adjustment	√	√	√	√	√	
CITROEN	DS5	Air-bag	√	√	√	√	√	0012,0013
CITROEN	DS5	Engine relay unit	√	√	√	√	√	
CITROEN	DS5	Telematics	√	√	√	√	√	
CITROEN	DS5	Radio	√	√	√	√	√	
CITROEN	DS5	Steering wheel with integral controls (VCI)	√	√	√	√	√	
CITROEN	DS5	Multiplexed control panel	√	√	√	√	√	
CITROEN	DS5	Clock	√	√	√	√	√	
CITROEN	DS5	Windscreen wiper	√	√	√	√	√	
CITROEN	C-CROSSER	BSI	√	√	√	√	√	0054,0174
CITROEN	C-CROSSER	Engine ECU	√	√	√	√	√	0054,0022,0064,0187,0230,0270,0358,0359
CITROEN	C-CROSSER	Rear final drive piloted clutch	√	√	√	√	√	
CITROEN	C-CROSSER	Gearbox	√	√	√	√	√	
CITROEN	C-CROSSER	ABS/ Electronic stability program	√	√	√	√	√	0360,0361
CITROEN	C-CROSSER	Steering wheel angle sensor	√	√	√	√	√	
CITROEN	C-CROSSER	Airbag	√	√	√	√	√	
CITROEN	C-CROSSER	Locking and immobiliser control module	√	√	√	√	√	0362,0363
CITROEN	C-CROSSER	Instrument panel	√	√	√	√	√	0364,0365
CITROEN	C-CROSSER	Air conditioning	√	√	√	√	√	
CITROEN	C-CROSSER	Radio	√	√	√	√	√	
CITROEN	C-CROSSER	Hands Free Kit	√	√	√	√	√	
CITROEN	C-CROSSER	Navigation	√	√	√	√	√	
CITROEN	C-CROSSER	Driver's door control panel	√	√	√	√	√	
CITROEN	C-CROSSER	Passenger's door switch panel	√	√	√	√	√	
CITROEN	C-CROSSER	Rear LH door switch panel	√	√	√	√	√	
CITROEN	C-CROSSER	Rear RH door switch panel	√	√	√	√	√	
CITROEN	C-CROSSER	Headlamp beam corrector	√	√	√	√	√	
CITROEN	C-CROSSER	Sun roof	√	√	√	√	√	
CITROEN	C-CROSSER	Gear lever(DCT)	√	√	√	√	√	
CITROEN	C-CROSSER	Rain and light sensor	√	√	√	√	√	
CITROEN	C-CROSSER	Parking aid	√	√	√	√	√	
CITROEN	NEMO	BSI	√	√	√	√	√	0366,0367,0175,0368

CITROEN	NEMO	Engine ECU	√	√	√	√	√	0370,0204,0207,0215,0371,0372,0373,0374,0034,0240,0375,0376,0377,0230
CITROEN	NEMO	Gearbox	√	√	√	√	√	0378,0379,0380,0381,0382,0190,0191,0383,0384,0385,0386,01
CITROEN	NEMO	Anti-lock Braking System (ABS) / Electronic Stability Program (ESP)	√	√	√	√	√	
CITROEN	NEMO	Driver's and passenger's airbags	√	√	√	√	√	
CITROEN	NEMO	Instrument panel	√	√	√	√	√	0387,0388,0389
CITROEN	NEMO	Parking assistance	√	√	√	√	√	0390
CITROEN	BERLINGO	Coded immobiliser	√	√	√	√	√	
CITROEN	BERLINGO	Engine ECU	√	√	√	√	√	0054,0174,0168,0207,0337
CITROEN	BERLINGO	Anti-lock brake system	√	√	√	√	√	0391,0392,0393,0394,0395
CITROEN	BERLINGO	Airbag	√	√	√	√	√	
CITROEN	BERLINGO	Deadlocks	√	√	√	√	√	
CITROEN	BERLINGO	BSI	√	√	√	√	√	0396,0054,0174,0175,0326,0397,0398
CITROEN	BERLINGO	Radio post-equipment	√	√	√	√	√	
CITROEN	BERLINGO	CD player	√	√	√	√	√	
CITROEN	BERLINGO	Instrument panel	√	√	√	√	√	0054,0174
CITROEN	BERLINGO	Electrical vehicle	√	√	√	√	√	0399,0400,0401,0402,0403,0404,0405,0406,0407,0408
CITROEN	BERLINGO	Additional heating	√	√	√	√	√	0338
CITROEN	BERLINGO 2	BSI	√	√	√	√	√	0046,0053,0054,0174,0175,0176
CITROEN	BERLINGO 2	Instrument panel	√	√	√	√	√	0054,0174
CITROEN	BERLINGO 2	Radio post-equipment	√	√	√	√	√	0054,0174,0409,0410,0411,0412,0413,0414,0415,0022
CITROEN	BERLINGO 2	CD player	√	√	√	√	√	
CITROEN	BERLINGO 2	Parking assistance	√	√	√	√	√	
CITROEN	BERLINGO 2	Alarm	√	√	√	√	√	0054,0174
CITROEN	BERLINGO 2	Switch module at the steering wheel	√	√	√	√	√	
CITROEN	BERLINGO 2	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	BERLINGO 2	Airbag	√	√	√	√	√	0054,0174
CITROEN	BERLINGO 2	Display or Telematics	√	√	√	√	√	0054,0174,0179,0180,0181,0182,0183,0184
CITROEN	BERLINGO 2	Engine ECU	√	√	√	√	√	0054,0174,0168,0188,0239,0022,0187
CITROEN	BERLINGO 2	Gas injection	√	√	√	√	√	

CITROEN	BERLINGO 2	Anti-lock brake system	√	√	√	√	√	0054,0174,0017,0019,0083
CITROEN	BERLINGO 2	Additional heating	√	√	√	√	√	0338
CITROEN	BERLINGO 2	Service module	√	√	√	√	√	0197,0234
CITROEN	BERLINGO 2	Display	√	√	√	√	√	0054,0174
CITROEN	BERLINGO 2	Electric converter electronic unit	√	√	√	√	√	
CITROEN	BERLINGO 2	Hybrid traction chain supervisor	√	√	√	√	√	0036,0416,0417
CITROEN	BERLINGO 2	Traction battery management	√	√	√	√	√	
CITROEN	BERLINGO 2	Gearbox	√	√	√	√	√	0379,0380,0418,0419,0420
CITROEN	BERLINGO 2	Electric power steering ECU	√	√	√	√	√	
CITROEN	BERLINGO (B9)	BSI	√	√	√	√	√	0046,0053,0054,0174,0177,0175,0176,0232
CITROEN	BERLINGO (B9)	Instrument panel	√	√	√	√	√	0054,0022
CITROEN	BERLINGO (B9)	Radio	√	√	√	√	√	0054,0022
CITROEN	BERLINGO (B9)	CD player	√	√	√	√	√	
CITROEN	BERLINGO (B9)	ABS	√	√	√	√	√	0054,0174,0019,0083,0017
CITROEN	BERLINGO (B9)	Parking assistance	√	√	√	√	√	0202,0054,0174
CITROEN	BERLINGO (B9)	Air conditioning	√	√	√	√	√	0054,0022,0421,0422,0423,0424,0425
CITROEN	BERLINGO (B9)	Switch module under the steering wheel	√	√	√	√	√	
CITROEN	BERLINGO (B9)	Alarm	√	√	√	√	√	0178,0054,0022
CITROEN	BERLINGO (B9)	Trailer relay unit	√	√	√	√	√	
CITROEN	BERLINGO (B9)	Engine relay unit	√	√	√	√	√	
CITROEN	BERLINGO (B9)	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	BERLINGO (B9)	Airbag	√	√	√	√	√	0054,0022
CITROEN	BERLINGO (B9)	Multifunction screen(EMF)	√	√	√	√	√	0054,0022
CITROEN	BERLINGO (B9)	Telematic	√	√	√	√	√	

CITROEN	BERLINGO (B9)	Engine ECU	√	√	√	√	√	0174,0168,0054,0203,0204,0205,0206,0207,0208,0209,0210,0211,0212,0213,0214,0216,0087,0188,0185,0022,0187,0222,0223,0224,0225,0226,0227,0228,022
CITROEN	BERLINGO (B9)	Multiplexed diesel additive pump	√	√	√	√	√	0022,0054
CITROEN	BERLINGO (B9)	Power steering	√	√	√	√	√	
CITROEN	BERLINGO (B9)	Hands Free Kit	√	√	√	√	√	0054,0022
CITROEN	BERLINGO (B9)	Bodywork Conversion Unit	√	√	√	√	√	
CITROEN	BERLINGO (B9)	Deflation detection	√	√	√	√	√	0258,0259,0260,0261
CITROEN	BERLINGO (B9)	Anti-slip mode selector	√	√	√	√	√	
CITROEN	BERLINGO (B9)	Battery charge status unit	√	√	√	√	√	0054,0174
CITROEN	BERLINGO (B9)	Services module	√	√	√	√	√	0054,0022
CITROEN	BERLINGO (B9)	Gearbox ECU	√	√	√	√	√	0092,0093,0094,0249,0250,0097,0251,0099,0252,0253,0254,0255,0256,0105,0106
CITROEN	Berlingo Electric(B9E)	BSI	√	√	√	√	√	0426,0004,0064
CITROEN	Berlingo Electric(B9E)	ABS or ESP ECU	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Radio	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Parking aid	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Onboard charger of the traction battery	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Traction battery ECU	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Traction battery cell electronics 01	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Traction battery cell electronics 02	√	√	√	√	√	

CITROEN	Berlingo Electric(B9E)	Traction battery cell electronics 03	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Traction battery cell electronics 04	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Traction battery cell electronics 05	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Traction battery cell electronics 06	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Traction battery cell electronics 07	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Traction battery cell electronics 08	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Traction battery cell electronics 09	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Traction battery cell electronics 10	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Air conditioning ECU	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Instrument panel	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Passenger compartment air heating resistor	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Air conditioning compressor	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Electric vehicle management ECU	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Service module	√	√	√	√	√	0004,0022
CITROEN	Berlingo Electric(B9E)	Multifunction display	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Drive train interface ECU	√	√	√	√	√	



CITROEN	Berlingo Electric(B9E)	Alarm	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Airbag	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Rain sensor	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Power steering electric pump unit	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Telematics	√	√	√	√	√	0004
CITROEN	Berlingo Electric(B9E)	Electric machine management ECU	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Battery charge status unit Generation 2	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Engine relay unit	√	√	√	√	√	
CITROEN	Berlingo Electric(B9E)	Switch module under the steering wheel (Top of column)	√	√	√	√	√	
CITROEN	JUMPY / DISPATCH	Coded anti-theft device	√	√	√	√	√	
CITROEN	JUMPY / DISPATCH	Engine ECU	√	√	√	√	√	0207,0337,0054,0168
CITROEN	JUMPY / DISPATCH	Anti-lock brake system	√	√	√	√	√	
CITROEN	JUMPY / DISPATCH	Auto gearbox	√	√	√	√	√	
CITROEN	JUMPY / DISPATCH	Airbag	√	√	√	√	√	
CITROEN	JUMPY / DISPATCH	Additional heating	√	√	√	√	√	0338
CITROEN	JUMPY / DISPATCH	BSI	√	√	√	√	√	
CITROEN	JUMPY 2 / DISPATCH 2	Engine ECU	√	√	√	√	√	0207,0337,0054,0168
CITROEN	JUMPY 2 / DISPATCH 2	Anti-lock brake system	√	√	√	√	√	
CITROEN	JUMPY 2 / DISPATCH 2	Auto gearbox	√	√	√	√	√	

CITROEN	JUMPY 2 / DISPATCH 2	Additional heating	√	√	√	√	√	0338
CITROEN	JUMPY 2 / DISPATCH 2	Airbag	√	√	√	√	√	0054,0174
CITROEN	JUMPY 2 / DISPATCH 2	BSI	√	√	√	√	√	
CITROEN	JUMPY 3 / DISPATCH 3	BSI	√	√	√	√	√	0046,0053,0054,0174,0177,0175,0176
CITROEN	JUMPY 3 / DISPATCH 3	Instrument panel	√	√	√	√	√	0054,0022
CITROEN	JUMPY 3 / DISPATCH 3	Radio	√	√	√	√	√	0054,0022
CITROEN	JUMPY 3 / DISPATCH 3	CD player	√	√	√	√	√	
CITROEN	JUMPY 3 / DISPATCH 3	Parking assistance	√	√	√	√	√	0054,0174
CITROEN	JUMPY 3 / DISPATCH 3	Air conditioning	√	√	√	√	√	0054,0022,0421,0422,0423,0424,0425
CITROEN	JUMPY 3 / DISPATCH 3	Rear air conditioning table	√	√	√	√	√	0427,0428
CITROEN	JUMPY 3 / DISPATCH 3	Switch module under the steering wheel	√	√	√	√	√	
CITROEN	JUMPY 3 / DISPATCH 3	Alarm	√	√	√	√	√	0178,0054,0022
CITROEN	JUMPY 3 / DISPATCH 3	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	JUMPY 3 / DISPATCH 3	Airbag	√	√	√	√	√	0054,0022
CITROEN	JUMPY 3 / DISPATCH 3	Multifunction screen	√	√	√	√	√	0054,0022
CITROEN	JUMPY 3 / DISPATCH 3	Telematic	√	√	√	√	√	0192,0181,0174,0184

CITROEN	JUMPY 3 / DISPATCH 3	Engine ECU	√	√	√	√	√	0054,0174,0168,0188,0185,0189,0022,0187,0036,0239,0241,0242,0269,0223,0270,0224
CITROEN	JUMPY 3 / DISPATCH 3	ABS/ Electronic stability program	√	√	√	√	√	0054,0174,0017,0019,0083
CITROEN	JUMPY 3 / DISPATCH 3	Power steering	√	√	√	√	√	
CITROEN	JUMPY 3 / DISPATCH 3	Pneumatic suspension	√	√	√	√	√	0276,0277,0159,0054,0022
CITROEN	JUMPY 3 / DISPATCH 3	Additional heating	√	√	√	√	√	0338
CITROEN	JUMPY 3 / DISPATCH 3	Trailer relay unit	√	√	√	√	√	
CITROEN	JUMPY 3 / DISPATCH 3	Engine relay unit	√	√	√	√	√	
CITROEN	JUMPY 3 / DISPATCH 3	Hands Free Kit	√	√	√	√	√	0054,0022
CITROEN	JUMPY 3 / DISPATCH 3	Bodywork Conversion Unit	√	√	√	√	√	
CITROEN	JUMPY 3 / DISPATCH 3	Gearbox ECU	√	√	√	√	√	0054,0022,0257
CITROEN	JUMPER / RELAY	Engine ECU	√	√	√	√	√	0429
CITROEN	JUMPER / RELAY	ABS	√	√	√	√	√	
CITROEN	JUMPER 2 / RELAY 2	Engine ECU	√	√	√	√	√	0430,0377,0429
CITROEN	JUMPER 2 / RELAY 2	Anti-lock brake system	√	√	√	√	√	
CITROEN	JUMPER 2 / RELAY 2	Auto gearbox	√	√	√	√	√	
CITROEN	JUMPER 2 / RELAY 2	Radiofrequency receiver	√	√	√	√	√	
CITROEN	JUMPER 2 / RELAY 2	Alarm	√	√	√	√	√	
CITROEN	JUMPER 2 / RELAY 2	Code unit	√	√	√	√	√	
CITROEN	JUMPER 2 / RELAY 2	Additional heating	√	√	√	√	√	0431,0432,0433,0434
CITROEN	JUMPER 2 / RELAY 2	Airbag	√	√	√	√	√	

CITROEN	JUMPER 2 / RELAY 2	Service module	√	√	√	√	√	0234
CITROEN	JUMPER 3 / RELAY 3	Built-in Systems Interface (BSI)	√	√	√	√	√	0435,0366,0367,0362,0363
CITROEN	JUMPER 3 / RELAY 3	Instrument panel	√	√	√	√	√	0387,0388,0436
CITROEN	JUMPER 3 / RELAY 3	Parking assistance	√	√	√	√	√	0390
CITROEN	JUMPER 3 / RELAY 3	Air conditioning	√	√	√	√	√	
CITROEN	JUMPER 3 / RELAY 3	Telematic	√	√	√	√	√	
CITROEN	JUMPER 3 / RELAY 3	Chrono-tachograph	√	√	√	√	√	0437,0438,0439
CITROEN	JUMPER 3 / RELAY 3	Engine ECU	√	√	√	√	√	0430,0377,0440,0240,0441,0442,0443,0280
CITROEN	JUMPER 3 / RELAY 3	ABS/ Electronic stability program	√	√	√	√	√	0030
CITROEN	JUMPER 3 / RELAY 3	Airbags	√	√	√	√	√	
CITROEN	JUMPER 3 / RELAY 3	Power steering	√	√	√	√	√	
CITROEN	JUMPER 3 / RELAY 3	Pneumatic suspension	√	√	√	√	√	0034,0444,0445
CITROEN	JUMPER 3 / RELAY 3	Additional heating	√	√	√	√	√	0338
CITROEN	JUMPER 3 Minibus / RELAY 3 Minibus	Built-in Systems Interface (BSI)	√	√	√	√	√	0435,0366,0367,0362,0363
CITROEN	JUMPER 3 Minibus / RELAY 3 Minibus	Instrument panel	√	√	√	√	√	0387,0388,0446
CITROEN	JUMPER 3 Minibus / RELAY 3 Minibus	Parking assistance	√	√	√	√	√	0390
CITROEN	JUMPER 3 Minibus / RELAY 3 Minibus	Air conditioning	√	√	√	√	√	
CITROEN	JUMPER 3 Minibus / RELAY 3 Minibus	Telematic	√	√	√	√	√	
CITROEN	JUMPER 3 Minibus / RELAY 3 Minibus	Chrono-tachograph	√	√	√	√	√	0437,0438,0439

CITROEN	JUMPER 3 Minibus / RELAY 3 Minibus	Engine ECU	√	√	√	√	√	0430,0377,0440,0240,0441,0442,0443,0280
CITROEN	JUMPER 3 Minibus / RELAY 3 Minibus	ABS/ Electronic stability program	√	√	√	√	√	0030
CITROEN	JUMPER 3 Minibus / RELAY 3 Minibus	Airbags	√	√	√	√	√	
CITROEN	JUMPER 3 Minibus / RELAY 3 Minibus	Power steering	√	√	√	√	√	
CITROEN	JUMPER 3 Minibus / RELAY 3 Minibus	Pneumatic suspension	√	√	√	√	√	0034,0444,0445
CITROEN	JUMPER 3 Minibus / RELAY 3 Minibus	Additional heating	√	√	√	√	√	0338
CITROEN		ABS/traction control	√	√	√	√	√	
CITROEN		Built-in Systems Interface	√	√	√	√	√	
CITROEN		Engine ECU	√	√	√	√	√	
CITROEN	AX	Engine	√	√	√	√	√	0399,0400,0401,0405,0406,0407,0408
CITROEN	SAXO	Electrical vehicle	√	√	√	√	√	0399,0400,0401,0402,0403,0404,0405,0406,0407,0408
CITROEN	SAXO	Engine ECU	√	√	√	√	√	
CITROEN	SAXO	Anti-lock brake system	√	√	√	√	√	0391,0392,0393,0394,0395
CITROEN	SAXO	Additional heating	√	√	√	√	√	0338
CITROEN	SAXO	Airbag	√	√	√	√	√	
CITROEN	SAXO	Automatic gear box	√	√	√	√	√	
CITROEN	SAXO	Transponder	√	√	√	√	√	
CITROEN	SAXO	Remote control by HF plip	√	√	√	√	√	
CITROEN	ZX	Engine	√	√	√	√	√	
CITROEN	ZX	Driving assistance	√	√	√	√	√	0391,0392,0393,0394,0395
CITROEN	ZX	Protection	√	√	√	√	√	0447,0448,0449,0450
CITROEN	XSARA	Engine ECU	√	√	√	√	√	0207,0337,0054,0174
CITROEN	XSARA	Air conditioning	√	√	√	√	√	
CITROEN	XSARA	Additional heating	√	√	√	√	√	0338
CITROEN	XSARA	Anti-lock brake system	√	√	√	√	√	
CITROEN	XSARA	BSI	√	√	√	√	√	0396,0054,0174,0175,0326,0397,0398
CITROEN	XSARA	Airbag	√	√	√	√	√	

CITROEN	XSARA	Left hand side airbag	√	√	√	√	√	
CITROEN	XSARA	Right hand side airbag	√	√	√	√	√	
CITROEN	XSARA	Auto gearbox	√	√	√	√	√	0447,0448,0449,0450
CITROEN	XSARA	Radio post-equipment	√	√	√	√	√	
CITROEN	XSARA	CD player	√	√	√	√	√	
CITROEN	XSARA	Instrument panel	√	√	√	√	√	
CITROEN	XSARA 2	BSI	√	√	√	√	√	0396,0054,0174,0175,0326,0451,0452,0327,0331,0332,0333
CITROEN	XSARA 2	Navigation	√	√	√	√	√	
CITROEN	XSARA 2	Instrument panel	√	√	√	√	√	0054,0174
CITROEN	XSARA 2	Air conditioning	√	√	√	√	√	0054,0174
CITROEN	XSARA 2	Radio post-equipment	√	√	√	√	√	0054,0174
CITROEN	XSARA 2	Car-phone	√	√	√	√	√	0054,0174
CITROEN	XSARA 2	CD player	√	√	√	√	√	
CITROEN	XSARA 2	Parking assistance	√	√	√	√	√	
CITROEN	XSARA 2	Top of column	√	√	√	√	√	
CITROEN	XSARA 2	Alarm	√	√	√	√	√	0054,0174
CITROEN	XSARA 2	Driving school mode	√	√	√	√	√	
CITROEN	XSARA 2	Display or Autopc	√	√	√	√	√	0054,0174
CITROEN	XSARA 2	Engine ECU	√	√	√	√	√	0054,0174,0207,0337,0168,0004,0453
CITROEN	XSARA 2	Anti-lock brake system	√	√	√	√	√	0054,0174
CITROEN	XSARA 2	Auto gearbox	√	√	√	√	√	0054,0174
CITROEN	XSARA 2	Additional heating	√	√	√	√	√	0432,0433,0434
CITROEN	XSARA 2	Airbag	√	√	√	√	√	0054,0174
CITROEN	XSARA 2	Switch module at the steering wheel	√	√	√	√	√	
CITROEN	XSARA 2	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	XSARA PICASSO	BSI ECU	√	√	√	√	√	0396,0054,0174,0175,0326,0397,0398
CITROEN	XSARA PICASSO	Navigation	√	√	√	√	√	
CITROEN	XSARA PICASSO	Multifunction display	√	√	√	√	√	0054,0174
CITROEN	XSARA PICASSO	Air conditioning	√	√	√	√	√	0054,0174
CITROEN	XSARA PICASSO	Radio post-equipment	√	√	√	√	√	0054,0174
CITROEN	XSARA PICASSO	CD player	√	√	√	√	√	
CITROEN	XSARA PICASSO	Instrument panel	√	√	√	√	√	0054,0174
CITROEN	XSARA PICASSO	Engine ECU	√	√	√	√	√	0054,0174,0168,0207,0337,0336,0188,0239,0022,0187,0185,01
CITROEN	XSARA PICASSO	Anti-lock brake system	√	√	√	√	√	0054,0174,0017,0019,0083
CITROEN	XSARA PICASSO	Additional heating	√	√	√	√	√	0338
CITROEN	XSARA PICASSO	Airbag	√	√	√	√	√	0054,0174

CITROEN	XSARA PICASSO	Diesel additive function	√	√	√	√	√	0193,0194,0195,0196
CITROEN	XSARA PICASSO	Left hand side airbag	√	√	√	√	√	
CITROEN	XSARA PICASSO	Right hand side airbag	√	√	√	√	√	
CITROEN	XSARA PICASSO	BSI	√	√	√	√	√	0046,0053,0054,0174,0175,0176
CITROEN	XSARA PICASSO	Parking assistance	√	√	√	√	√	
CITROEN	XSARA PICASSO	Alarm	√	√	√	√	√	0054,0174
CITROEN	XSARA PICASSO	Switch module at the steering wheel	√	√	√	√	√	
CITROEN	XSARA PICASSO	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	XSARA PICASSO	Telematic	√	√	√	√	√	0197,0198
CITROEN	XSARA PICASSO	Auto gearbox	√	√	√	√	√	0054,0174
CITROEN	XSARA PICASSO CHINE	BSI	√	√	√	√	√	0046,0053,0054,0174,0175,0176
CITROEN	XSARA PICASSO CHINE	Navigation	√	√	√	√	√	
CITROEN	XSARA PICASSO CHINE	Air conditioning	√	√	√	√	√	0054,0174
CITROEN	XSARA PICASSO CHINE	Instrument panel	√	√	√	√	√	0054,0174
CITROEN	XSARA PICASSO CHINE	Radio post-equipment	√	√	√	√	√	0054,0174
CITROEN	XSARA PICASSO CHINE	CD player	√	√	√	√	√	
CITROEN	XSARA PICASSO CHINE	Parking assistance	√	√	√	√	√	
CITROEN	XSARA PICASSO CHINE	Alarm	√	√	√	√	√	0054,0174
CITROEN	XSARA PICASSO CHINE	Switch module at the steering wheel	√	√	√	√	√	
CITROEN	XSARA PICASSO CHINE	Rain sensor/ Brightness	√	√	√	√	√	

CITROEN	XSARA PICASSO CHINE	Diesel additive function	√	√	√	√	√	0193,0194,0195,0196
CITROEN	XSARA PICASSO CHINE	Airbag	√	√	√	√	√	0054,0174
CITROEN	XSARA PICASSO CHINE	Multifunction display	√	√	√	√	√	0054,0174
CITROEN	XSARA PICASSO CHINE	Telematic	√	√	√	√	√	0197,0198
CITROEN	XSARA PICASSO CHINE	Engine ECU	√	√	√	√	√	0054,0174,0168,0207,0337,0336,0188,0239,0022,0187,0185,0189
CITROEN	XSARA PICASSO CHINE	Anti-lock brake system	√	√	√	√	√	0054,0174,0017,0019,0083
CITROEN	XSARA PICASSO CHINE	Auto gearbox	√	√	√	√	√	0054,0174
CITROEN	XSARA PICASSO CHINE	Additional heating	√	√	√	√	√	0338
CITROEN	XANTIA	Coded anti-theft device	√	√	√	√	√	
CITROEN	XANTIA	Engine ECU	√	√	√	√	√	
CITROEN	XANTIA	Air conditioning	√	√	√	√	√	
CITROEN	XANTIA	Airbag	√	√	√	√	√	
CITROEN	XANTIA	Automatic gear box	√	√	√	√	√	
CITROEN	XANTIA 2	Engine ECU	√	√	√	√	√	0207,0337
CITROEN	XANTIA 2	Air conditioning	√	√	√	√	√	
CITROEN	XANTIA 2	Additional heating	√	√	√	√	√	0338
CITROEN	XANTIA 2	Anti-lock brake system	√	√	√	√	√	0391,0392,0393,0394
CITROEN	XANTIA 2	Airbag	√	√	√	√	√	
CITROEN	XANTIA 2	Right hand side airbag	√	√	√	√	√	
CITROEN	XANTIA 2	Left hand side airbag	√	√	√	√	√	
CITROEN	XANTIA 2	Rear-view mirror	√	√	√	√	√	
CITROEN	XANTIA 2	Auto gearbox	√	√	√	√	√	0447,0448,0449,0450
CITROEN	XANTIA 2	BSI	√	√	√	√	√	
CITROEN	XM	Engine	√	√	√	√	√	
CITROEN	XM	Multiplexing	√	√	√	√	√	
CITROEN	XM	Coded anti-theft device	√	√	√	√	√	
CITROEN	XM	Engine ECU	√	√	√	√	√	0454,0455,0456
CITROEN	XM	ABS	√	√	√	√	√	0392,0391,0457,0458,0393,039
CITROEN	XM	Airbag	√	√	√	√	√	
CITROEN	XM	Rear-view mirror	√	√	√	√	√	
CITROEN	XM	Deadlocks	√	√	√	√	√	
CITROEN	XM	Suspension	√	√	√	√	√	
CITROEN	XM	Auto gearbox	√	√	√	√	√	
CITROEN	XM	Left hand side airbag	√	√	√	√	√	



CITROEN	XM	Right hand side airbag	√	√	√	√	√	
CITROEN	XM MULTIPLEXE E	Coded anti-theft device	√	√	√	√	√	
CITROEN	XM MULTIPLEXE E	Engine ECU	√	√	√	√	√	0454,0455,0456
CITROEN	XM MULTIPLEXE E	ABS	√	√	√	√	√	0392,0391,0457,0458,0393,0394
CITROEN	XM MULTIPLEXE E	Airbag	√	√	√	√	√	
CITROEN	XM MULTIPLEXE E	Rear-view mirror	√	√	√	√	√	
CITROEN	XM MULTIPLEXE E	Deadlocks	√	√	√	√	√	
CITROEN	XM MULTIPLEXE E	Suspension	√	√	√	√	√	
CITROEN	XM MULTIPLEXE E	Auto gearbox	√	√	√	√	√	
CITROEN	XM MULTIPLEXE E	Left hand side airbag	√	√	√	√	√	
CITROEN	XM MULTIPLEXE E	Right hand side airbag	√	√	√	√	√	
CITROEN	XM MULTIPLEXE E	Multiplexing	√	√	√	√	√	
CITROEN	EVASION / SYNERGIE	Coded anti-theft device	√	√	√	√	√	
CITROEN	EVASION / SYNERGIE	Engine ECU	√	√	√	√	√	
CITROEN	EVASION / SYNERGIE	Anti-lock brake system	√	√	√	√	√	
CITROEN	EVASION / SYNERGIE	Air conditioning	√	√	√	√	√	
CITROEN	EVASION / SYNERGIE	Airbag	√	√	√	√	√	
CITROEN	EVASION / SYNERGIE	Deadlocks	√	√	√	√	√	
CITROEN	FUKANG	Gearbox ECU	√	√	√	√	√	0447,0448,0449,0450
CITROEN	FUKANG	Engine ECU	√	√	√	√	√	0168,0174
CITROEN	FUKANG	Anti-lock brake system	√	√	√	√	√	0054,0174,0017
CITROEN	FUKANG	Transponder	√	√	√	√	√	

CITROEN	FUKANG 988	Gearbox ECU	√	√	√	√	√	0447,0448,0449,0450
CITROEN	FUKANG 988	Engine ECU	√	√	√	√	√	0168,0174
CITROEN	FUKANG 988	Anti-lock brake system	√	√	√	√	√	0054,0174,0017
CITROEN	FUKANG 988	Transponder	√	√	√	√	√	
CITROEN	ELYSEE	Gearbox ECU	√	√	√	√	√	0447,0448,0449,0450
CITROEN	ELYSEE	Engine ECU	√	√	√	√	√	0168,0174
CITROEN	ELYSEE	Anti-lock brake system	√	√	√	√	√	
CITROEN	ELYSEE	Airbag	√	√	√	√	√	
CITROEN	ELYSEE	Transponder	√	√	√	√	√	
CITROEN	ELYSEE	Remote control by HF plip	√	√	√	√	√	
CITROEN	C-ELYSEE 4	ABS	√	√	√	√	√	0054,0174,0017
CITROEN	C-ELYSEE 4	Gearbox ECU	√	√	√	√	√	
CITROEN	C-ELYSEE 4	Airbag	√	√	√	√	√	
CITROEN	C-ELYSEE 4	Engine ECU	√	√	√	√	√	0168,0174,0054
CITROEN	C-ELYSEE 4	Transponder	√	√	√	√	√	
CITROEN	C-ELYSEE 4	Central locking control unit	√	√	√	√	√	
CITROEN	C-ELYSEE 5	ABS	√	√	√	√	√	0054,0174,0017
CITROEN	C-ELYSEE 5	Gearbox ECU	√	√	√	√	√	
CITROEN	C-ELYSEE 5	Airbag	√	√	√	√	√	
CITROEN	C-ELYSEE 5	Engine ECU	√	√	√	√	√	0168,0174,0054
CITROEN	C-ELYSEE 5	Transponder	√	√	√	√	√	
CITROEN	C-ELYSEE 5	Central locking control unit	√	√	√	√	√	
CITROEN	C- TRIOMPHE	BSI	√	√	√	√	√	0046,0053,0054,0174,0177,0175,0176
CITROEN	C- TRIOMPHE	Instrument panel	√	√	√	√	√	0054,0022
CITROEN	C- TRIOMPHE	Radio	√	√	√	√	√	0054,0022
CITROEN	C- TRIOMPHE	CD player	√	√	√	√	√	
CITROEN	C- TRIOMPHE	ABS	√	√	√	√	√	0054,0174,0019,0017
CITROEN	C- TRIOMPHE	Parking assistance	√	√	√	√	√	0054,0174
CITROEN	C- TRIOMPHE	Air conditioning	√	√	√	√	√	0054,0022
CITROEN	C- TRIOMPHE	Alarm	√	√	√	√	√	0178,0054,0022
CITROEN	C- TRIOMPHE	Steering wheel with fixed central controls	√	√	√	√	√	
CITROEN	C- TRIOMPHE	Rain sensor/ Brightness	√	√	√	√	√	

CITROEN	C-TRIOMPHE	Airbag	√	√	√	√	√	0054,0022,0055
CITROEN	C-TRIOMPHE	Multifunction screen	√	√	√	√	√	0054,0022
CITROEN	C-TRIOMPHE	Telematic	√	√	√	√	√	0192,0181,0174,0184
CITROEN	C-TRIOMPHE	Engine ECU	√	√	√	√	√	0054,0174,0168
CITROEN	C-TRIOMPHE	Gearbox ECU	√	√	√	√	√	
CITROEN	C-TRIOMPHE	Trailer relay unit	√	√	√	√	√	
CITROEN	C-TRIOMPHE	Engine relay unit	√	√	√	√	√	
CITROEN	C-TRIOMPHE	Power steering	√	√	√	√	√	0054,0174
CITROEN	C-TRIOMPHE	Directional headlamps	√	√	√	√	√	0054,0174
CITROEN	C-TRIOMPHE	Hands Free Kit	√	√	√	√	√	0054,0022
CITROEN	C-TRIOMPHE	Driver's door module	√	√	√	√	√	
CITROEN	C-TRIOMPHE	Passenger's door module	√	√	√	√	√	
CITROEN	C-QUATRE 4	BSI	√	√	√	√	√	0046,0053,0054,0174,0177,0175,0176
CITROEN	C-QUATRE 4	Instrument panel	√	√	√	√	√	0054,0022
CITROEN	C-QUATRE 4	Radio	√	√	√	√	√	0054,0022
CITROEN	C-QUATRE 4	CD player	√	√	√	√	√	
CITROEN	C-QUATRE 4	ABS	√	√	√	√	√	0054,0174,0019,0017
CITROEN	C-QUATRE 4	Parking assistance	√	√	√	√	√	0054,0174
CITROEN	C-QUATRE 4	Air conditioning	√	√	√	√	√	0054,0022
CITROEN	C-QUATRE 4	Alarm	√	√	√	√	√	0178,0054,0022
CITROEN	C-QUATRE 4	Steering wheel with fixed central controls	√	√	√	√	√	
CITROEN	C-QUATRE 4	Airbag	√	√	√	√	√	0054,0022,0055
CITROEN	C-QUATRE 4	Multifunction screen	√	√	√	√	√	0054,0022
CITROEN	C-QUATRE 4	Telematic	√	√	√	√	√	0192,0181,0174,0184
CITROEN	C-QUATRE 4	Engine ECU	√	√	√	√	√	0054,0174,0168,0237,0238

CITROEN	C-QUATRE 4	Gearbox ECU	√	√	√	√	√	
CITROEN	C-QUATRE 4	Trailer relay unit	√	√	√	√	√	
CITROEN	C-QUATRE 4	Engine relay unit	√	√	√	√	√	
CITROEN	C-QUATRE 4	Power steering	√	√	√	√	√	0054,0174
CITROEN	C-QUATRE 4	Hands Free Kit	√	√	√	√	√	0054,0022
CITROEN	C-QUATRE 4	Driver's door module	√	√	√	√	√	
CITROEN	C-QUATRE 4	Passenger's door module	√	√	√	√	√	
CITROEN	C-QUATRE 5	BSI	√	√	√	√	√	0046,0053,0054,0174,0177,0175,0176
CITROEN	C-QUATRE 5	Instrument panel	√	√	√	√	√	0054,0022
CITROEN	C-QUATRE 5	Radio	√	√	√	√	√	0054,0022
CITROEN	C-QUATRE 5	CD player	√	√	√	√	√	
CITROEN	C-QUATRE 5	ABS	√	√	√	√	√	0054,0174,0019,0017
CITROEN	C-QUATRE 5	Parking assistance	√	√	√	√	√	0054,0174
CITROEN	C-QUATRE 5	Air conditioning	√	√	√	√	√	0054,0022
CITROEN	C-QUATRE 5	Alarm	√	√	√	√	√	0178,0054,0022
CITROEN	C-QUATRE 5	Steering wheel with fixed central controls	√	√	√	√	√	
CITROEN	C-QUATRE 5	Rain sensor/ Brightness	√	√	√	√	√	
CITROEN	C-QUATRE 5	Airbag	√	√	√	√	√	0054,0022,0055
CITROEN	C-QUATRE 5	Multifunction screen	√	√	√	√	√	0054,0022
CITROEN	C-QUATRE 5	Telematic	√	√	√	√	√	0192,0181,0174,0184
CITROEN	C-QUATRE 5	Engine ECU	√	√	√	√	√	0054,0174,0168
CITROEN	C-QUATRE 5	Gearbox ECU	√	√	√	√	√	
CITROEN	C-QUATRE 5	Trailer relay unit	√	√	√	√	√	
CITROEN	C-QUATRE 5	Engine relay unit	√	√	√	√	√	
CITROEN	C-QUATRE 5	Power steering	√	√	√	√	√	0054,0174

CITROEN	C-QUATRE 5	Hands Free Kit	√	√	√	√	√	0054,0022
CITROEN	C-QUATRE 5	Driver's door module	√	√	√	√	√	
CITROEN	C-QUATRE 5	Passenger's door module	√	√	√	√	√	
CITROEN	C-Elysee(M43)	BSI	√	√	√	√	√	0046,0053,0004,0030,0036
CITROEN	C-Elysee(M43)	Engine ECU	√	√	√	√	√	0054,0055,0030,0056,0057,0021,0233,0004,0059,0060,0061
CITROEN	C-Elysee(M43)	ABS	√	√	√	√	√	0004,0030
CITROEN	C-Elysee(M43)	Multifunction screen	√	√	√	√	√	0054,0062
CITROEN	C-Elysee(M43)	Switch module at the steering wheel	√	√	√	√	√	
CITROEN	C-Elysee(M43)	Gearbox ECU	√	√	√	√	√	0004,0021,0027,0037,0063,0048,0064,0030
CITROEN	C-Elysee(M43)	Airbag	√	√	√	√	√	0004,0459
CITROEN	C-Elysee(M43)	Electric power steering	√	√	√	√	√	0004,0055
CITROEN	C-Elysee(M43)	Radio	√	√	√	√	√	0004,0055
CITROEN	C-Elysee(M43)	Parking assistance	√	√	√	√	√	0004,0055,0038
CITROEN	C-Elysee(M43)	Siren	√	√	√	√	√	0004
CITROEN	C-Elysee(M43)	Instrument panel	√	√	√	√	√	0004
CITROEN	C-Elysee(M43)	Trailer relay unit	√	√	√	√	√	0055
CITROEN	C-Elysee(M43)	Multiplexed additive pump	√	√	√	√	√	0004,0030

CITROEN	C- Elysee(M43)	Electric steering lock	√	√	√	√	√	
CITROEN	C- Elysee(M43)	Electronic key reader	√	√	√	√	√	
CITROEN	C- Elysee(M43)	Hands free starting access electronic module	√	√	√	√	√	0054,0055,0036,0030,0133
CITROEN	C- Elysee(M43)	Multiplexed control panel	√	√	√	√	√	
CITROEN	C- Elysee(M43)	Telematics	√	√	√	√	√	0004,0055
CITROEN	DS 5LS	BSI	√	√	√	√	√	0046,0053,0004,0030,0036
CITROEN	DS 5LS	Engine ECU	√	√	√	√	√	0004,0279,0030,0054,0055,023
CITROEN	DS 5LS	ABS	√	√	√	√	√	0314,0275,0125
CITROEN	DS 5LS	Gearbox	√	√	√	√	√	0278,0004,0055,0233
CITROEN	DS 5LS	Power steering electric pump unit	√	√	√	√	√	0055
CITROEN	DS 5LS	Central voltage retention device	√	√	√	√	√	
CITROEN	DS 5LS	Multiplexed control panel	√	√	√	√	√	
CITROEN	DS 5LS	Supply protection and management unit	√	√	√	√	√	
CITROEN	DS 5LS	Electric steering lock	√	√	√	√	√	
CITROEN	DS 5LS	Electronic key reader	√	√	√	√	√	
CITROEN	DS 5LS	Battery charge status unit	√	√	√	√	√	
CITROEN	DS 5LS	Hands free starting access electronic module	√	√	√	√	√	0054,0055,0036,0030
CITROEN	DS 5LS	Electric secondary brake	√	√	√	√	√	0055,0233
CITROEN	DS 5LS	Radio	√	√	√	√	√	0004,0055
CITROEN	DS 5LS	Telematic	√	√	√	√	√	0004,0055
CITROEN	DS 5LS	Under inflation detection	√	√	√	√	√	
CITROEN	DS 5LS	Independent telematic unit (BTA)	√	√	√	√	√	
CITROEN	DS 5LS	Audio amplifier	√	√	√	√	√	0004,0055,0233
CITROEN	DS 5LS	Display	√	√	√	√	√	
CITROEN	DS 5LS	Matrix screen integral to the instrument panel	√	√	√	√	√	0004,0055,0233
CITROEN	DS 5LS	Parking aid	√	√	√	√	√	
CITROEN	DS 5LS	Switch module under the steering wheel (Top of column)	√	√	√	√	√	0233

CITROEN	DS 5LS	Steering wheel with integral controls (VCI)	√	√	√	√	√	
CITROEN	DS 5LS	Airbag	√	√	√	√	√	0012,0013
CITROEN	DS 5LS	Anti-theft alarm	√	√	√	√	√	0004
CITROEN	DS 5LS	Air conditioning ECU	√	√	√	√	√	
CITROEN	DS 5LS	Discharge bulbs vertical and horizontal adjustment	√	√	√	√	√	
CITROEN	DS 5LS	Rain and brightness sensor	√	√	√	√	√	
CITROEN	DS 5LS	Instrument panel	√	√	√	√	√	
CITROEN	DS 5LS	Engine relay unit	√	√	√	√	√	

Special Mode	Function Name
0000	Recorded parameters
0001	Restrictor
0002	Specific operations
0003	Pairing
0004	Configuration
0005	Programming of keys
0006	Status of some power outputs
0007	Initialisation/learning
0008	After repair, select this phrase(fault finding:operation finished)
0009	Declaration of document SIM
0010	Check after operation
0011	Numbers and addresses of services
0012	Locking
0013	Unlocking
0014	Operation check
0015	Electric folding roof closing cycle
0016	Electric folding roof opening cycle
0017	Bleeding
0018	Control unit
0019	Steering wheel angle sensor calibration
0020	De-calibration of the steering wheel angle sensor
0021	Initialising the autoadaptives
0022	Automatic configuration
0023	Injection ECU initialisation procedure
0024	Service action(particle filter / addition ECU)
0025	Additive ECU
0026	Configuration of mileage completed by parts
0027	Oil wear counter
0028	Programming /pairing
0029	Writing of the alcohol content
0030	Replacement parts
0031	Routine
0032	Initialisation of the auto-adaptive components
0033	Programming / matching
0034	ECU replacement
0035	After Sales operation (particle emission filter and fuel additive adding)
0036	Learning
0037	Accelerator pedal initialisation
0038	Overall check of the sensors
0039	Deactivation / Activation of the tyre under-inflation detection function
0040	Erasing of the secondary wheels
0041	Initialisation of the wheel sensors by reference
0042	Initialisation of the wheel sensors by excitation
0043	Valve search faulty
0044	Change of tyre fit
0045	Changing the mode Electrical
0046	Maintenance



0047	Stalling
0048	Counters
0049	Replacement control unit Med17.4
0050	Replacement others parts
0051	Control unit replacement MEV174
0052	After-sales particulate emission filter repair operation
0053	BSI operating mode
0054	Manual configuration
0055	Downloading
0056	Particulate filter after sales operation
0057	Initialisation of the diesel injectors autoadaptive values
0058	Pack reparation
0059	Replacement of the ECU
0060	Part replacement
0061	Replacement of the vacuum pump
0062	Initialisation
0063	Setting of the actuator
0064	Programming
0065	After repair, select this phrase(fault finding:operation finished,
0066	Ignition advance setting
0067	Initialisation:pump module
0068	Initialisation of the decoder
0069	Initialisation of the decoder/pump module
0070	Initialisation: Engine ECU + Passenger compartment protection control unit
0071	Initialisation of the engine ECU
0072	Initialisation: Passenger compartment protection control unit
0073	Repair
0074	Re-centring of autoadaptive systems
0075	Accelerator pedal learning
0076	Valve programming check
0077	Deactivation of economy mode
0078	Calibration of the steering wheel angle sensor
0079	Priming of the additive adding circuit
0080	Writing of the ethanol content
0081	Transition from Factory mode to Customer mode
0082	Programming of the sunroof
0083	Longitudinal acceleration sensor calibration
0084	Calibration
0085	Emergency battery
0086	Integrated services telephone number status
0087	Timing
0088	Checking the immobiliser code in the engine management ECU
0089	Write VIN
0090	Temporary reactivation of the Stop and Start function(for a maximum distance of 10 km)
0091	Replacement
0092	Gearbox programming
0093	Removal/refitting or replacement of the gearbox ECU
0094	Replacement of the hydraulic clutch bearing
0095	Check of the gearbox control actuator oil level
0096	Draining of the gearbox control actuator oil

0097	Removal/refitting or replacement of a gearbox control actuator position sensor
0098	Removal/refitting or replacement of the electropump assembly
0099	Removal/refitting or replacement of the gearbox control actuator
0100	Removal/refitting or replacement of a solenoid valve or of the pressure sensor
0101	Removal/refitting or replacement of the control actuator reservoir or of the accumulator
0102	Removal/refitting or replacement of the electropump assembly electric motor
0103	Removal/refitting or replacement of the clutch cover or of the clutch disc
0104	Removal/refitting or replacement of the gearbox
0105	Replacement of the gear lever
0106	Replacement of the paddles at the steering wheel
0107	REPLACEMENT OF THE ADDITIVE BAG TANK
0108	REPLACEMENT OF THE ADDITIVE PUMP
0109	Spare part
0110	CALIBRATION
0111	Initialisation of the decoder/Engine ECU
0112	Learning(mixer flap/timing)
0113	Learning:accelerator pedal
0114	C02 adjustment
0115	Programming of the heights
0116	Programming of the type of headlamp
0117	Maintenance-BSI operating mode
0119	Reading of the oil wear counter
0120	Programming operations
0121	Parts programming procedures
0122	Matching
0123	Check the timing adjustment
0124	Specific after sales operations
0125	Deactivation of the automatic application of the electric parking brake function
0126	Programming of the sensors
0127	Initialising of the active damper
0128	Brake cable replacement
0129	Electric parking brake replacement
0130	Supply
0131	Zeroing of the break-in table
0132	VIN configuration
0133	Check of the detection of a hands-free remote control on each aerial
0134	Checking the matching between the hands-free identifier and the hands-free control unit
0135	Initialisation of the rain and brightness sensor
0136	Programming of the actuators
0137	Programming of the immobiliser code for the electric steering lock
0138	Replacement of the accessories drive belt
0139	Replacement of the reduction gear
0140	Replace the hybrid management ECU
0141	Replacement of the electric drive machine or of the reversible alternator
0142	'Forced starting by starter' mode
0143	Exit from 'Factory' mode
0144	Reactivation
0145	Configuration (volumerear speaker)
0146	Initialisation of the ECU supply
0147	Learning(steering wheel sensor)

0148	Replacement of the particle emission filter and work on the additive adding circuit
0149	Simulation of the Distance Alert function
0150	Activation or initialisation of the radar
0151	Sensor programming
0152	Engine immobiliser test
0153	ECUs operating mode
0154	Particle emission filter after sales operation
0155	Towbar
0156	Configuration of the injectors
0157	Configuration of the engine ECU
0158	Depressurisation
0159	Pressurisation
0160	Configuration procedure
0161	Vehicle immobilisation information
0162	Traction battery maintenance
0163	Dynamic information
0164	System status information
0165	Brake switches and relays information
0166	Calibration of the steering wheel angle sensor : C2, C3, C3 pluriel, New Look C5 with ESP MK60
0167	Reading of the calibration status of the steering wheel angle
0168	Calibration identification reference configuration
0169	Setting of the clutch actuator to the removal/refitting position
0170	Clutch and gearbox actuator programming
0171	Program new keys
0172	Saved parameters
0173	Guided manual configuration
0174	Internet configuration
0175	Key programming
0176	BSI initialisation
0177	Check of the coded engine immobiliser code in the BSI
0178	Reset break-in table
0179	Telematics unit
0180	Voice synthesiser test
0181	Telematic unit cooling fan test
0182	Erase personal details
0183	Fibre optic test
0184	Change battery
0185	ECU REPLACEMENT (COUNTERS)
0186	AUTO-ADAPTIVE INITIALISATION
0187	Injectors classification
0188	Initialise auto-adaptives
0189	Particle filter and diesel additive maintenance
0190	Set gearbox actuator to removal position
0191	Set gearbox actuator to refitting position
0192	Services telephone numbers
0193	Additive tank top up or replacement (low additive level LED illuminated)
0194	Particle filter replacement
0195	Replacement of the additive ECU
0196	Configuration of the additive ECU
0197	Configuration of the VIN code

0198	Remote Controlled Wake-up line
0199	Reading of the injector classification
0200	Memorising of the injector classification
0201	Writing of the injector classification
0202	Test of the ultrasonic sensors
0203	Control unit
0204	Motorised throttle unit
0205	Upstream and downstream oxygen sensors
0206	Accelerator pedal sensor
0207	Injectors
0208	Catalytic converter
0209	Fuel sender / pump module
0210	Inlet and exhaust camshaft phase sensor
0211	Inlet and exhaust camshaft dephasing electrovalve
0212	Inlet pressure sensor
0213	Variable valve lift motor
0214	Variable valve lift system position sensor
0215	Purge canister solenoid valve
0216	Canister purge electrovalve
0217	Fuel pressure regulation electrovalve
0218	Fuel HP pump
0219	Rail pressure sensor
0220	Camshaft phase sensor
0221	Inlet camshaft dephasing electrovalve
0222	Injector configuration
0223	Particulate filter forced regeneration
0224	Programming of the total quantity of additive injected into the particulate emission filter
0225	Programming of the quantity of additive remaining in the reservoir
0226	Injector 1 classification
0227	Injector 2 classification
0228	Injector 3 classification
0229	Injector 4 classification
0230	Forced particle filter regeneration
0231	Programming of the total quantity of additive injected into the particulate emission filter
0232	Forcing of the fuel gauging data
0233	Pack Reparation
0234	Configuration of the vehicle localisation unit fitted due to theft
0235	Sensor programming check
0236	Erasing sensor addresses
0237	Initialisation of auto-adaptation
0238	Recentring of the counters for the FRIC C' faults
0239	ECU replacement or downloading (counters)
0240	Injector replacement
0241	Particulate filter and diesel additive maintenance
0242	INJECTOR REPLACEMENT (SID 803 A ECU)
0243	Temporary reactivation of the Stop and Start function
0244	Replacement of the automatic gearbox
0245	Automatic gearbox ECU replacement
0246	Automatic gearbox and automatic gearbox ECU replacement
0247	Automatic gearbox oil change

0248	Automatic gearbox oil wear counter
0249	Checking the oil level of the gearbox control actuator
0250	Draining the oil from the gearbox control actuator
0251	Removal/refitting or replacement of the electric pump unit
0252	Removal/refitting or replacement of an electrovalve or the pressure sensor
0253	Removal/refitting or replacement of the reservoir of the control actuator or the accumulator
0254	Removal/refitting or replacement of the electric motor of the electric pump unit
0255	Removal/refitting or replacement of the clutch mechanism or clutch plate
0256	Removing/refitting or replacing the gearbox
0257	Write oil wear counter value
0258	Read wheel transmitter module identifiers
0259	Write wheel transmitter module identifiers by references
0260	Write identifiers by exciting wheel transmitter modules
0261	Search for faulty wheel transmitter modules
0262	Automatic addressing and motor programming
0263	Recycling motor
0264	Distribution motor
0265	Front LH mixing motor
0266	Front RH mixing motor
0267	Rear LH mixing motor
0268	Rear RH mixing motor
0269	Classification of the 4 injectors
0270	Particle filter replacement and additive circuit repair
0271	Replacement of the automatic gearbox electric control ECU
0272	Replacement of the gear selection actuator
0273	Replacement of the automatic gearbox electric control ECU and the gear selection actuator
0274	Clutch pedal position sensor calibration
0275	Reactivation of automatic application of the electric parking brake
0276	Reference height programming
0277	Depressurise
0278	Writing to oil wear counter
0279	Initialisation of the autoadaptive values
0280	Forced regeneration, vehicle stationary
0281	Replacement of injector 1
0282	Replacement of injector 2
0283	Replacement of injector 3
0284	Replacement of injector 4
0285	Change of high pressure pump with its fuel flow regulator
0286	EGR electrovalve replacement
0287	Replacement of the EGR exchanger
0288	Change of air mixer
0289	Replacement of the turbo
0290	Air flow sensor replacement
0291	Change of engine block without the flowmeter
0292	Change of engine block with the flowmeter
0293	Replacement of the additive reservoir, of the pump or of the pipes
0294	Replacement of the particle emission filter
0295	Filling of the diesel additive adding reservoir
0296	Replacement of the oxygen sensor
0297	Replacement of the power accumulator or of the voltage retaining device

0298	Replacement of the ancillary drive belt
0299	Replacement of the exhaust manifold
0300	Replacement of the cylinder head
0301	Replacement of the reversible alternator
0302	Initialisation of diesel injector 1
0303	Initialisation of diesel injector 2
0304	Initialisation of diesel injector 3
0305	Initialisation of diesel injector 4
0306	Temporary reactivation of the Stop and Start function (Speed limited to 10 km/h)
0307	Forced regeneration of the particle filter, vehicle stationary
0308	Initialisation of the 4 diesel injectors
0309	Replacement of the 4 injectors
0310	Replacement of the differential pressure sensor
0311	Replacement of the high pressure pump or the flow regulation valve
0312	Replacement of the diesel high pressure rail
0313	Filling of the diesel additive tank
0314	CALIBRATION OF THE STEERING WHEEL ANGLE SENSOR
0315	Initialisation of the wheel transmitter modules
0316	Replacement of the engine management ECU
0317	Replacement of the engine management ECU and the immobiliser and locking management module
0318	Replacement of injectors
0319	Replacement of diesel high pressure pump
0320	Replacement of the ancillaries battery current sensor
0321	Oil wear counters reset
0322	Configuration of ECU
0323	Particulate filter replacement
0324	Replace the timing belt
0325	Steering wheel angle calibration
0326	BSI programming
0327	Customer mode forcing
0328	Wheel emitter programming
0329	Search for faulty wheel module
0330	Search for worn battery on wheel emitter
0331	Reset maintenance mileage + maintenance number
0332	Reset maintenance mileage
0333	Reset maintenance number done
0334	Reset parameters
0335	Activation of the HFR connection test function
0336	Particle filter regeneration
0337	Injection ECU
0338	CO2 setting
0339	Replacement control unit MEV17.4.2
0340	Replacement control unit MED17.4.2
0341	Tests of the fuel circuit
0342	Temporary reactivation of the Stop and Start function (for a maximum distance of 10 km)
0343	Replacement part
0344	Programming of the neutral position
0345	Vehicle reference height adjustment
0346	Vehicle height sensor programming
0347	Reinitialisation of the motor's thermal protection

0348	Programming of the motorised tailgate customisable position
0349	Erasing of the customisable position programmed by the motorised tailgate
0350	Erasing of the motorised tailgate programming
0351	EGR valve programming1 ( passenger compartment side)
0352	EGR valve programming2 ( Close to the bumper)
0353	Initialisation of the air mixer
0354	Initialisation of the oxygen sensor
0355	Bleed suspension circuit
0356	Reinitialisation of headlamp type
0357	Deflation detection
0358	Programming of the total additive quantity
0359	Communication with the BSI ECU
0360	Individual programming of sensors
0361	Programming of all sensors
0362	Programming of keys and remote controls
0363	Program remote controls
0364	Maintenance indicator
0365	Maintenance indicator reset
0366	Alignment of the ECU configuration with the configuration entered in the BSI
0367	Alarm
0368	Restore supply after impact
0370	Oxygen sensors
0371	Engine speed sensor or engine speed sensor target
0372	Mechanical parts linked with the engine combustion (cylinder head, valve, ...)
0373	Reprogramming the configuration
0374	Exhaust gas recycling valve programming
0375	Replacement of the exhaust gas recycling valve
0376	Re-initialisation of the configuration
0377	Speed limiter that can be set
0378	Programming sequence( gearbox and clutch actuators)
0379	Programming of the clutch actuator
0380	Gearbox actuator programming
0381	Gearbox actuator initialisation
0382	Write counters.
0383	Bleeding of the clutch
0384	Draining of the hydraulic pressure accumulator
0385	Initialisation of the clutch
0386	Programming of the gearbox grid
0387	Maintenance indicators
0388	Maintenance limit
0389	Reset Maintenance indicators
0390	Tow hitch
0391	Front left-hand wheel solenoid valve
0392	Front right-hand wheel solenoid valve
0393	Rear left hand wheel electrovalve
0394	Rear right hand wheel electrovalve
0395	Pump motor
0396	Change of status
0397	EMC programming
0398	BSI + EMC programming

0399	Clearing Water Required
0400	Equalisation charge
0401	Charge state memorised
0402	Charge cancellation
0403	Battery record
0404	Erasing the totals
0405	Downloading battery parameters
0406	Store Ah counters
0407	Clearing of Ah counter memories
0408	Ecu self-test
0409	Radio configuration
0410	Configuration of the screen
0411	Aerial configuration
0412	Illumination table/ Button lighting level
0413	Illumination table/ Lighting level of the buttons in night mode
0414	Illumination table/ Screen lighting level
0415	Illumination table/ Lighting level of the screen in night mode
0416	Calibration/decalsibration of the steering wheel angle sensor
0417	Inclinometer sensor calibration / decalibration
0418	Clutch counters.
0419	Gearbox counters
0420	Energy dissipated into the synchros counters
0421	Automatic Addressing and Learning of all engines
0422	Air inlet and recycling motor
0423	Air distribution motor
0424	Driver's mixing motor
0425	Passenger's mixing motor
0426	Maintenance- BSI operating mode
0427	Automatic Addressing and Initialisation
0428	Mixer motor
0429	Vehicle speed limit
0430	Reinitialise the recognition
0431	Heating on
0432	Reset overheating counter
0433	Reset failed starting attempts counter
0434	Reset fuel supply circuit priming counter
0435	Configuration configured
0436	Reset maintenance information
0437	Language configuration
0438	Display configuration
0439	TIME CHANGE (summer time, winter time)
0440	High Pressure pump or flow regulation valve learning
0441	Cylinder head replacement or fuel injector learning
0442	Air conditioning or cruise control replacement
0443	Oil parameter reinitialisation
0444	Body height sensor replacement
0445	Air reservoir or compressor replacement
0446	Reset maintenance indicator
0447	Without OBD output
0448	With OBD output



0449	Without shift lock
0450	With shift lock
0451	Engine ECU initialisation
0452	BSI + engine ECU initialisation
0453	Injector classification
0454	Idling speed adjustment
0455	Starting delivery adjustment
0456	Full load delivery adjustment
0457	Electrovalve, R.H. rear wheel
0458	Electrovalve, L.H. rear wheel
0459	Locking / Unlocking