

Alfa Spider

Powertrain

Systemem	Ident.	DTC	FrFrame	Livedata	Actuators	Coding
Injectie Unit (Motor ECU)						
Bosch Motronic M1.5.5	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	0	46	14	<input checked="" type="checkbox"/>
Bosch Motronic M2.10.3 (2.0l TS 16v)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	143	32	0	<input type="checkbox"/>
Bosch Motronic M2.10.4 (TS 16v)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	154	36	0	<input type="checkbox"/>
Bosch Motronic M3.7.1 (3.0l 12/24v El. key)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	176	41	0	<input type="checkbox"/>
Bosch Motronic ME2.1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	0	76	18	<input checked="" type="checkbox"/>
Bosch Motronic ME3.1 (V6)	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	70	106	22	<input checked="" type="checkbox"/>
Bosch Motronic ML4.1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	141	25	0	<input type="checkbox"/>
Bosch Motronic Me7.3.1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	63	87	22	<input checked="" type="checkbox"/>
Bosch Motronic MeD7.11	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	49	90	12	<input checked="" type="checkbox"/>

Chassis

Systemem	Ident.	DTC	FrFrame	Livedata	Actuators	Coding
ABS/ESP System						
Bosch 5.3	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	4	8	8	<input type="checkbox"/>
Bosch 5.3 TC/ASR	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	6	0	0	<input type="checkbox"/>

Body

Systemem	Ident.	DTC	FrFrame	Livedata	Actuators	Coding
Airbag						
TRW MY 1997	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	2	22	0	<input type="checkbox"/>
Electrisch dak						

DURA	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	15	0	0	<input type="checkbox"/>
------	-------------------------------------	-------------------------------------	----	---	---	--------------------------

DTC = Diagnostic Trouble Codes = Foutcodes lezen en wissen